



 : Parts Location

Code		See Page	Code	See Page	Code	See Page	
B4	A	48 (LHD)	B19	44 (*1)	D43	53 (*5)	
		56 (RHD)		45 (*2)		54 (*6)	
B7	B	44 (*1)		46 (*3)	H5	C	42, 49 (LHD)
		52 (*4)		52 (*4)			42, 57 (RHD)
B8	F	46 (*3)		53 (*5)	H20		49 (LHD)
		54 (*6)		54 (*6)		57 (RHD)	
B9	A	45 (*2)	44 (*1)	H23		49 (LHD)	
		53 (*5)	45 (*2)		57 (RHD)		
B10	E	46 (*3)	46 (*3)				
		54 (*6)	52 (*4)				

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
5B	30	Cowl to Head Lamp Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5H	30	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5S	31	
6C	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)
6F	38 (LHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement LH)
	38 (RHD)	Instrument Panel Wire and Center J/B (Instrument Panel Reinforcement RH)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AB1	64 (LHD)	Cowl to Head Lamp Wire and Engine Room Main Wire (Left Side of the Instrument Panel J/B)
	72 (RHD)	
DB1	62 (*3)	Engine Wire and Engine Room Main Wire (Front Side of Engine Room R/B No. 1)
	70 (*6)	
DB2	61 (*2)	
	69 (*5)	
DB5	60 (*1)	
	68 (*4)	
HB1	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	
HB4	64 (LHD)	
	72 (RHD)	

 : Ground Points

Code	See Page	Ground Points Location
D2	60 (*1)	Engine Block
	68 (*4)	
D3	61 (*2)	
	69 (*5)	
D4	62 (*3)	
	70 (*6)	
H2	64 (LHD)	Instrument Panel Reinforcement
	72 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E