



 : Parts Location

Code		See Page	Code		See Page	Code	See Page
B10	E	46 (*3)	D5	A	54 (*6)	H20	49 (LHD)
		54 (*6)			46 (*3)		57 (RHD)
D5	A	46 (*3)	D6	B	54 (*6)		

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	28	Engine Room R/B No.2 (Inside of Battery Room)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment Front)
1D		
5E	30	Engine Room Main Wire and Instrument Panel J/B (Left Side of Instrument Panel)
5M	31	Instrument Panel Wire and Instrument Panel J/B (Left Side of Instrument Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
DB1	62 (*3)	Engine Wire and Engine Room Main Wire (Front Side of Engine Room R/B No.1)
	70 (*6)	
DB4	62 (*3)	
	70 (*6)	
DB6	62 (*3)	
	70 (*6)	
HB1	64 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Under the Instrument Panel J/B)
	72 (RHD)	

* 1 : LHD 2TR-FE * 2 : LHD 2KD-FTV * 3 : LHD 5L-E * 4 : RHD 2TR-FE * 5 : RHD 2KD-FTV * 6 : RHD 5L-E * 7 : 2TR-FE
 * 8 : 2KD-FTV, 5L-E