



4. Disconnect the accelerator cable guide from the fire wall, and then remove the accelerator cable.

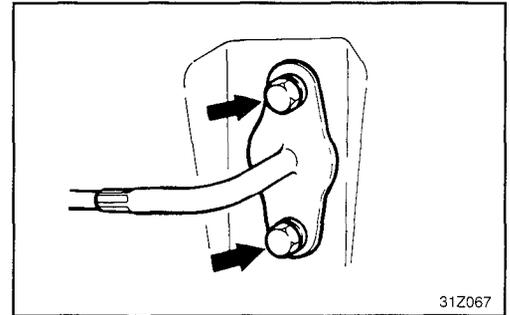

**Accelerator Pedal**

1. Loosen the accelerator cable adjusting nut, and disconnect the accelerator cable from the accelerator arm and remove the accelerator pedal.
2. Remove the return spring from the accelerator arm.
3. Remove the cotter pin from the accelerator arm shaft, and then remove the accelerator arm from the accelerator arm bracket.

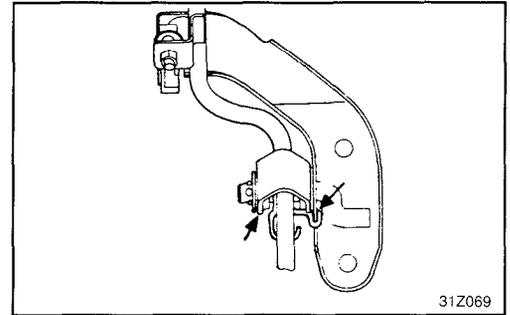

**INSPECTION**

1. Check the inner and outer cables for damage.
2. Check the cable for smooth movement.
3. Check the accelerator arm for bending.
4. Check the return spring for deterioration.
5. Check for connection of accelerator cable to end fitting


**INSTALLATION**

1. Apply the specified multipurpose grease around the each moving point of the pedal.

---

Recommended multipurpose grease . . . . .  
 Multipurpose grease SAE J310a, NLGI  
 grade #2 or equivalent

---

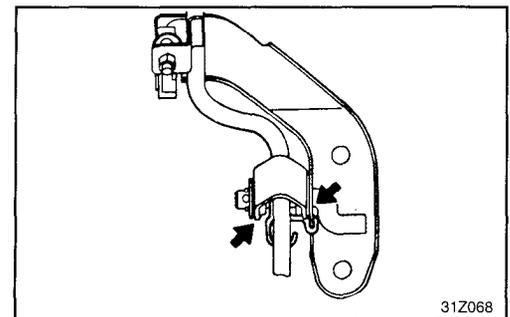

2. To prevent entry of exhaust fumes, apply semi-drying type sealant to the bolt mounting hole, and then tighten the accelerator arm bracket.
3. Make sure that the accelerator cable is laid without sharp bends.
4. inspect the play of accelerator cable.
5. Install parts and torque to specification.

