



# F RELAY LOCATIONS

## [Engine Compartment]


- \* 1:2KD-FTV, 5L-E
- \* 2:2TR-FE

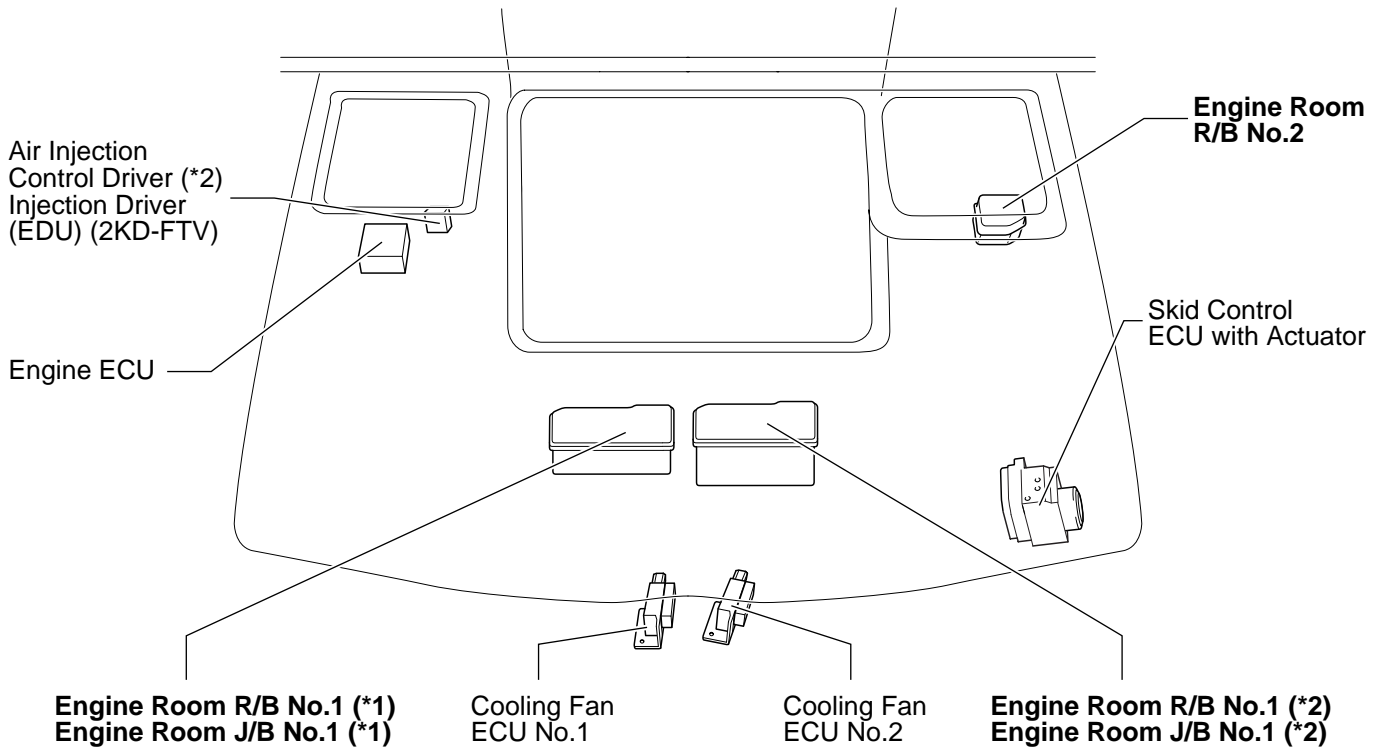


## [Body]

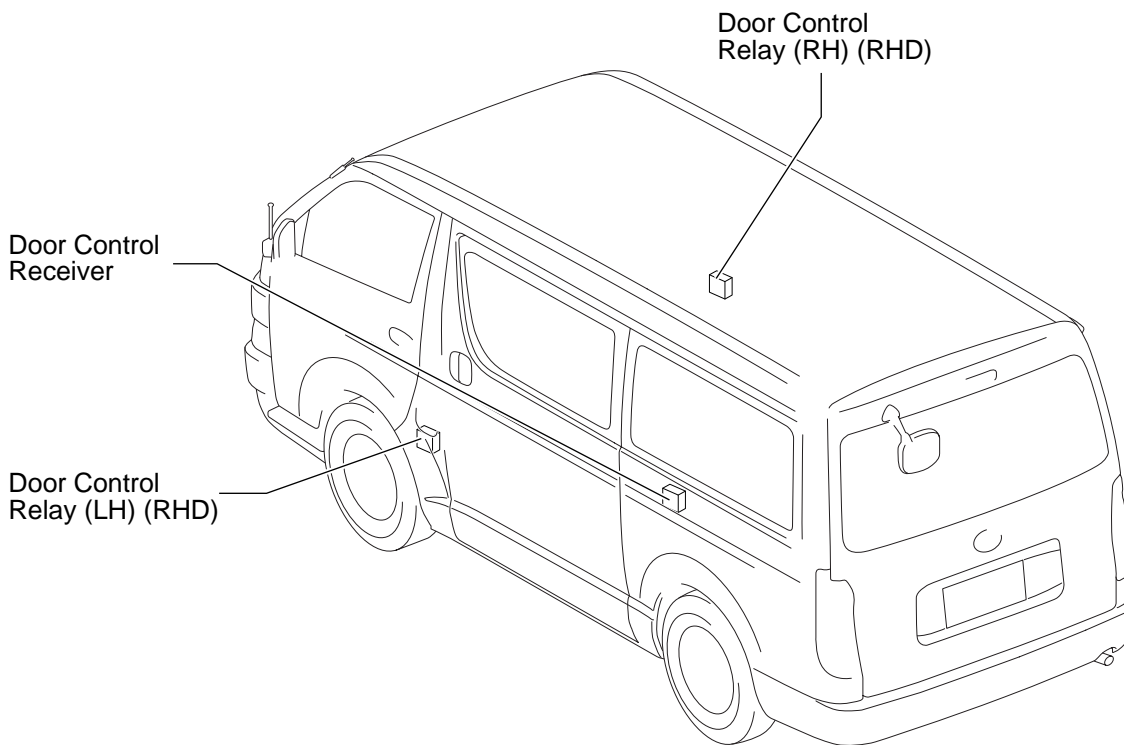

**[Instrument Panel]  
(LHD)**

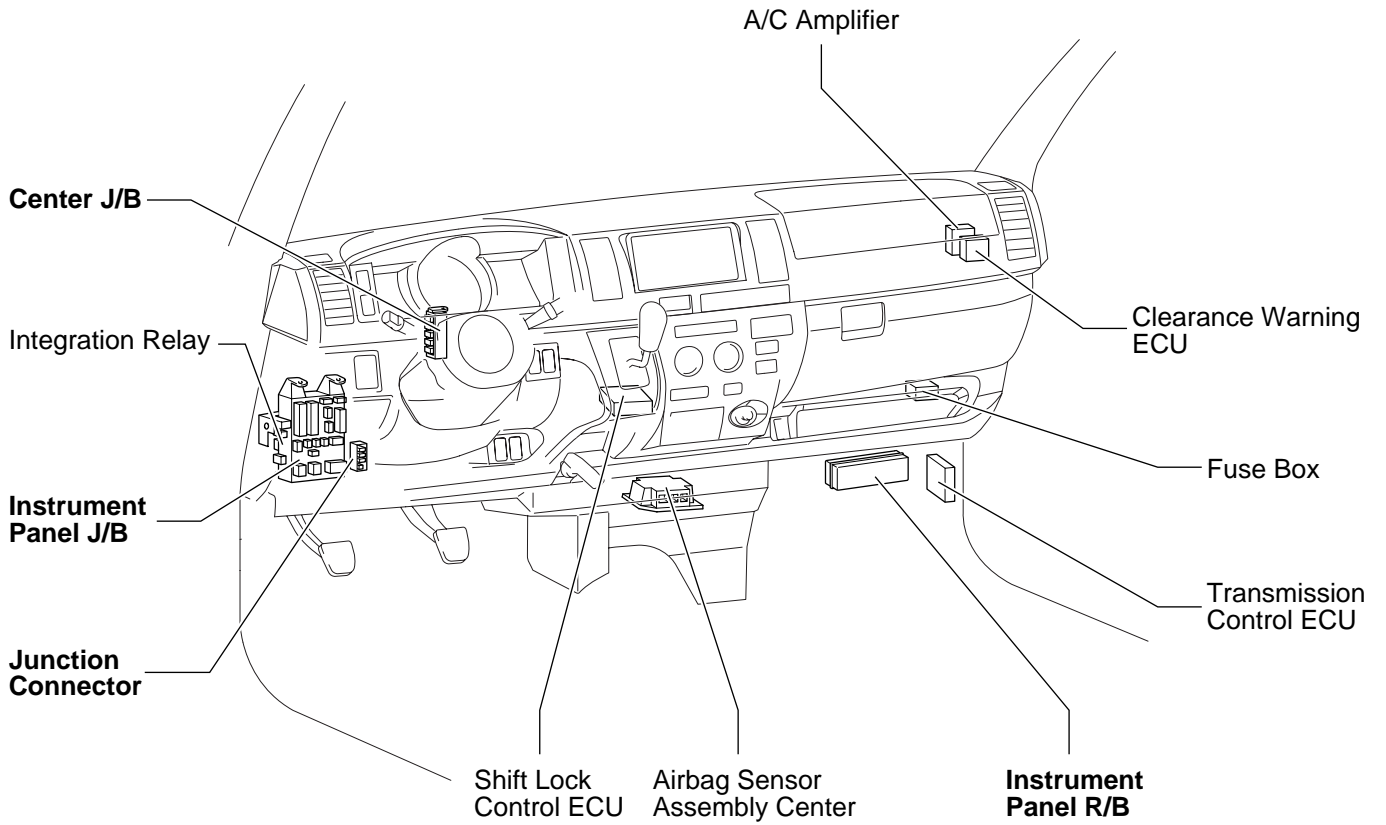

**(RHD)**

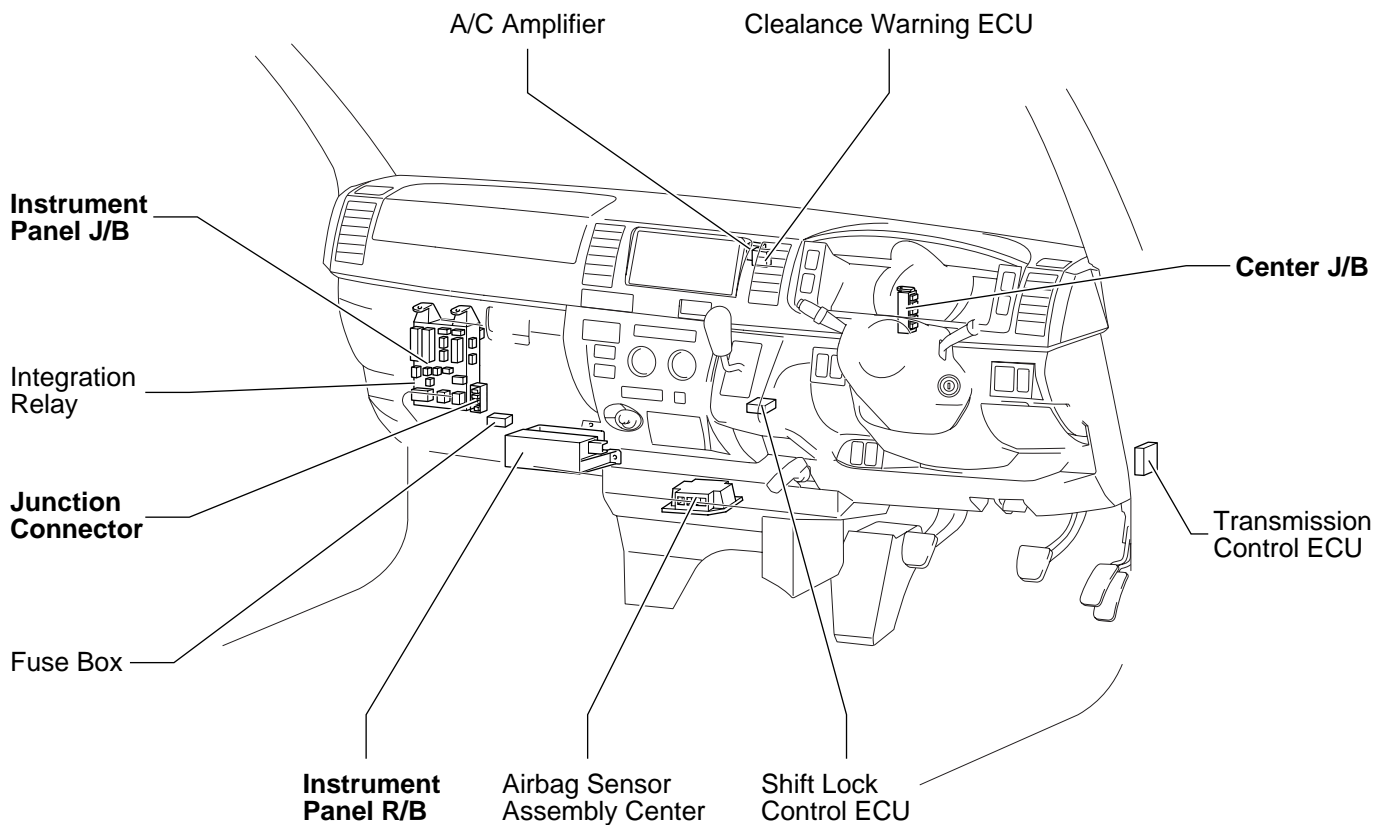


# F RELAY LOCATIONS

① : Engine Room R/B No.1	<b>Engine Compartment Front (See Page 20)</b>
○ : Engine Room J/B No.1	

[2TR-FE]


- \* 1:120A MAIN4 (for High Current)
- \* 2:40A HTR (for High Current)
- \* 3:30A RR CLR (for High Current)
- \* 4:140A ALT (for High Current)
- \* 5:50A A/PUMP (for High Current)
- \* 6:50A MAIN3 (for High Current)
- \* 7:50A FAN2 (for High Current)
- \* 8:50A FAN1 (for High Current)

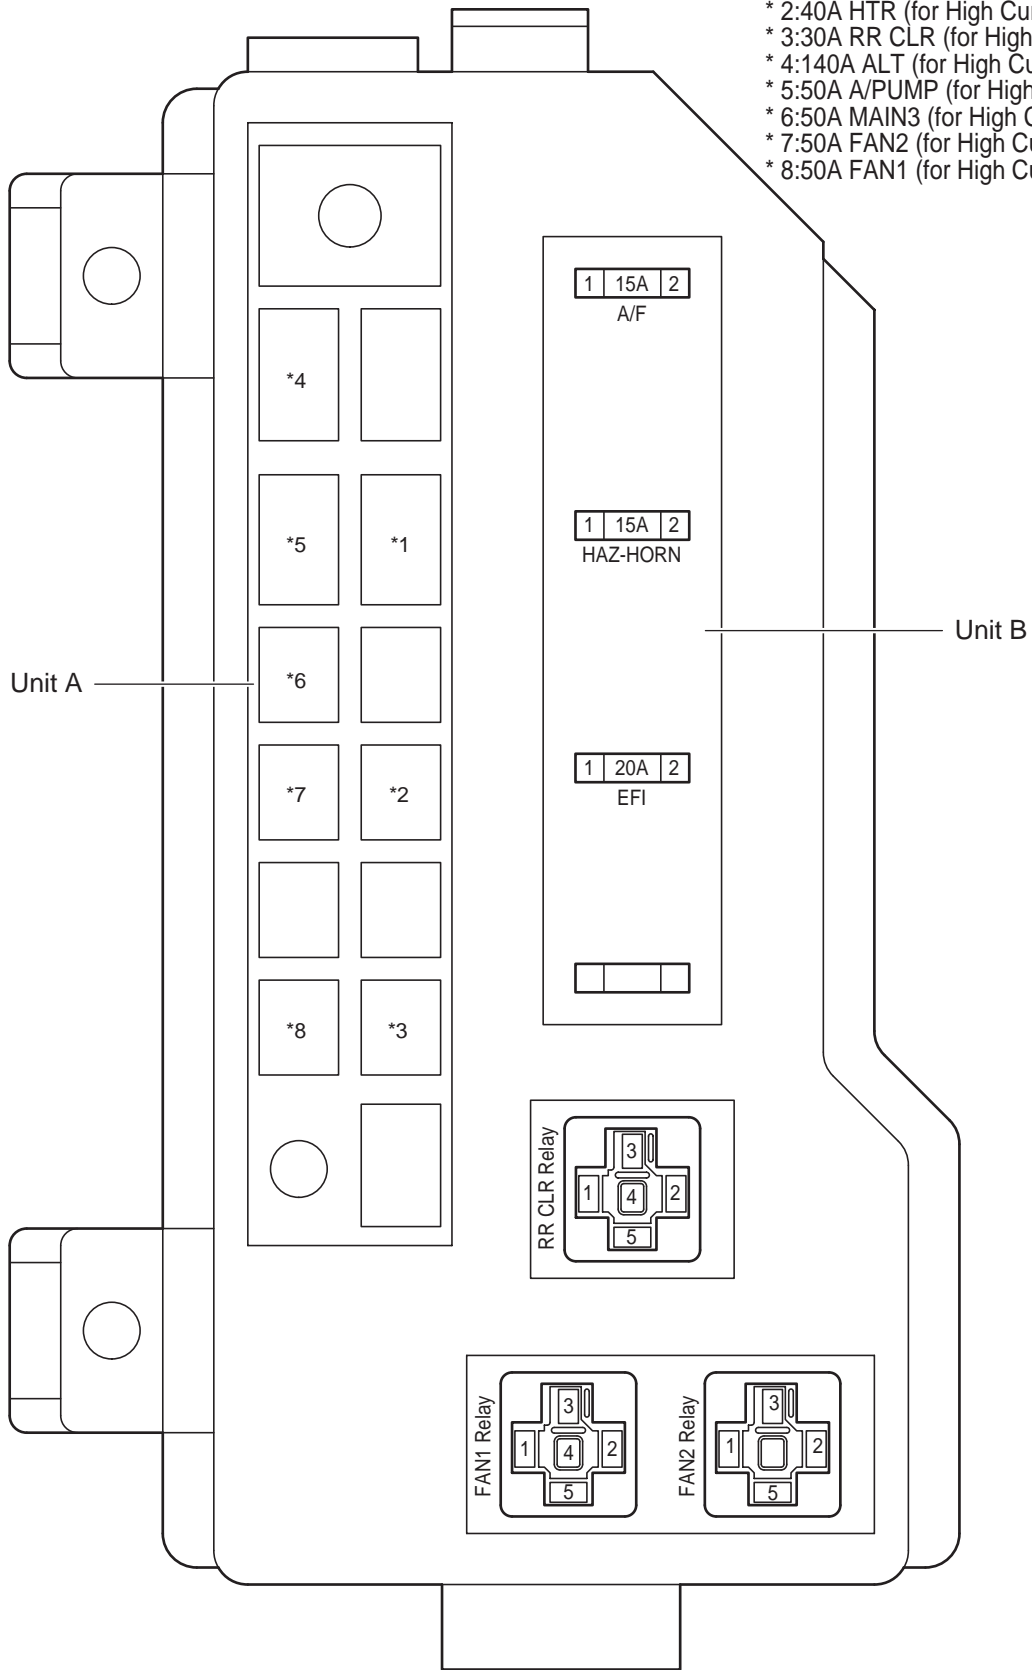

<p>① : Engine Room R/B No.1</p> <p>○ : Engine Room J/B No.1</p>	<h3>Engine Compartment Front (See Page 20)</h3>
---	---


[2KD-FTV, 5L-E]

- \* 1:50A PTC1 (for High Current)
- \* 2:120A MAIN4 (for High Current)
- \* 3:40A HTR (for High Current)
- \* 4:30A RR CLR (for High Current)
- \* 5:50A PTC2 (for High Current)
- \* 6:140A ALT (for High Current)
- \* 7:80A GLOW (for High Current)
- \* 8:50A MAIN3 (for High Current)
- \* 9:50A FAN2 (for High Current)
- \* 10:30A FAN3 (for High Current)
- \* 11:50A FAN1 (for High Current)

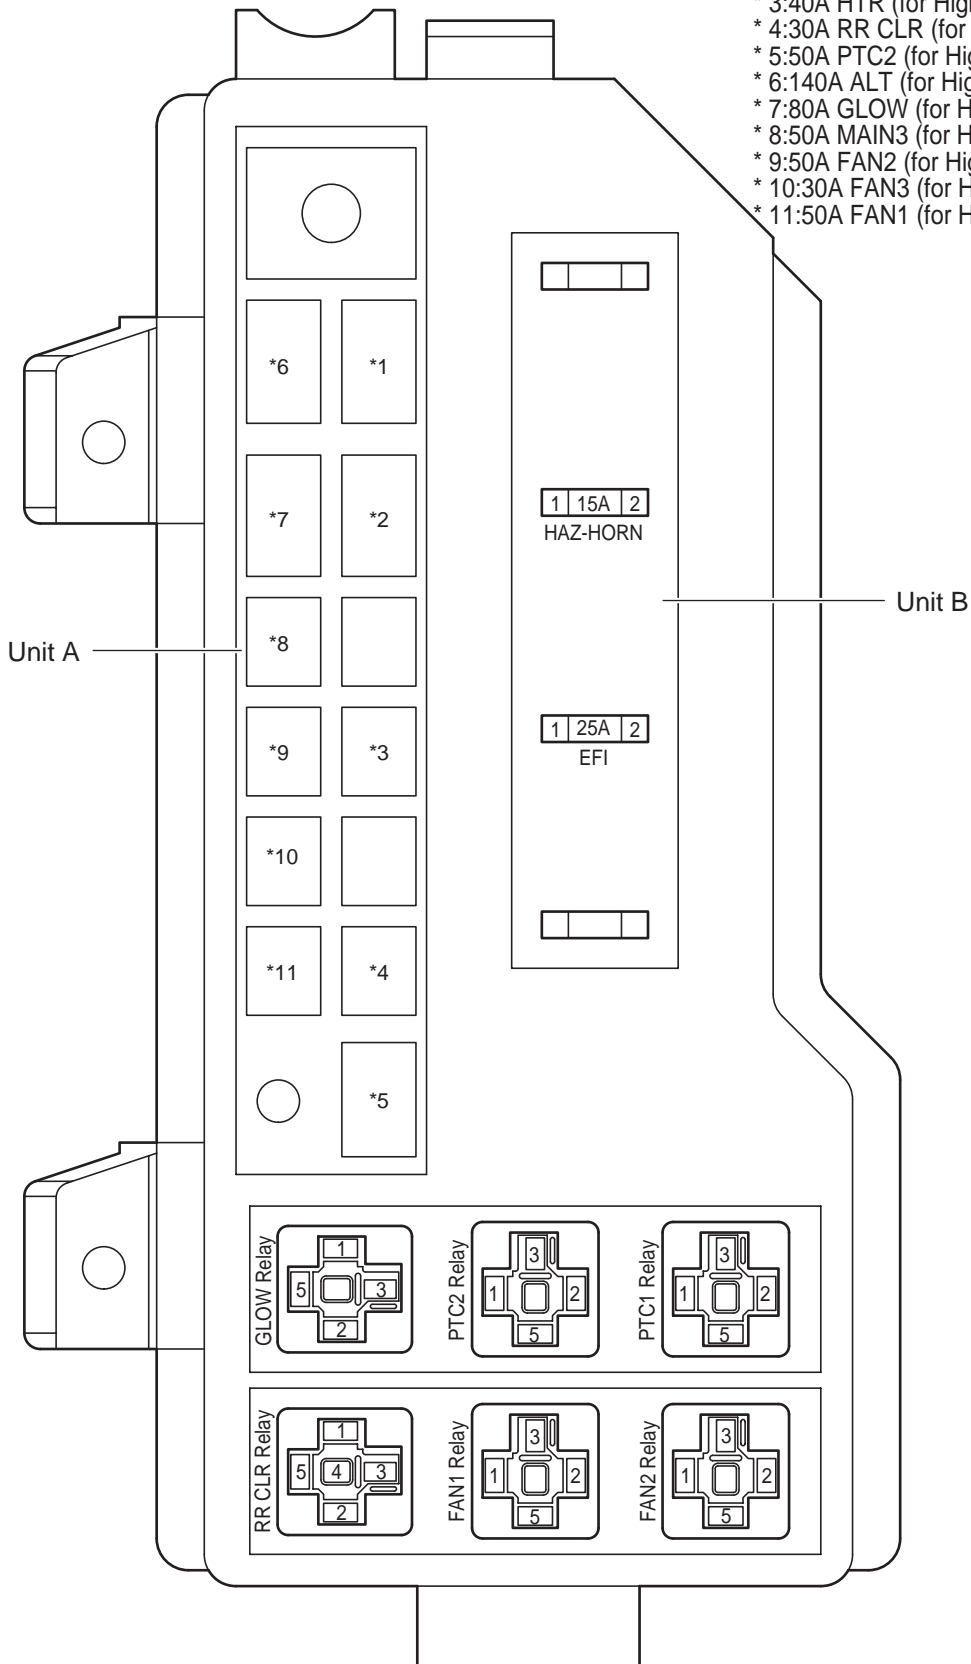


# F RELAY LOCATIONS

① : Engine Room R/B No.1	<b>Engine Compartment Front (See Page 20)</b>
○ : Engine Room J/B No.1	

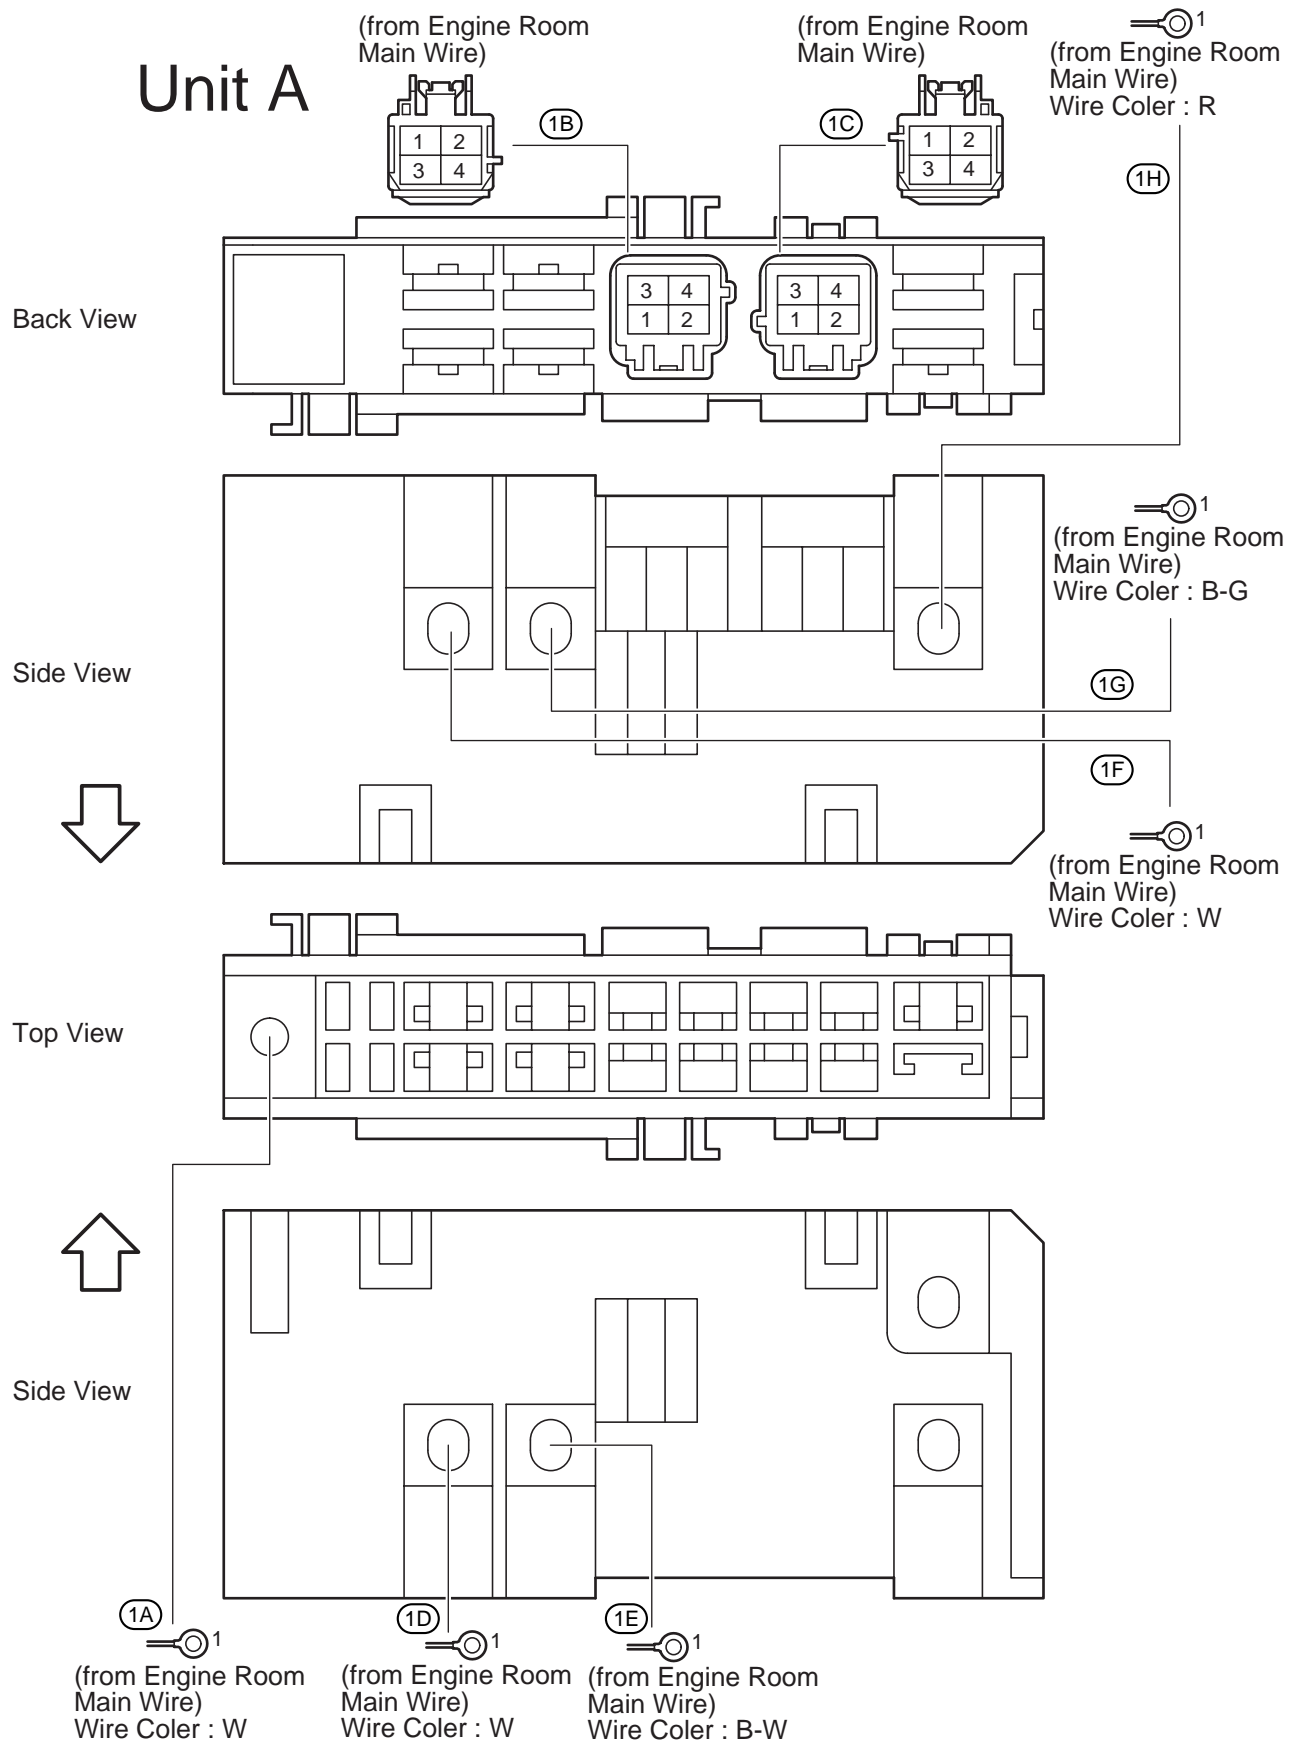


# Unit B

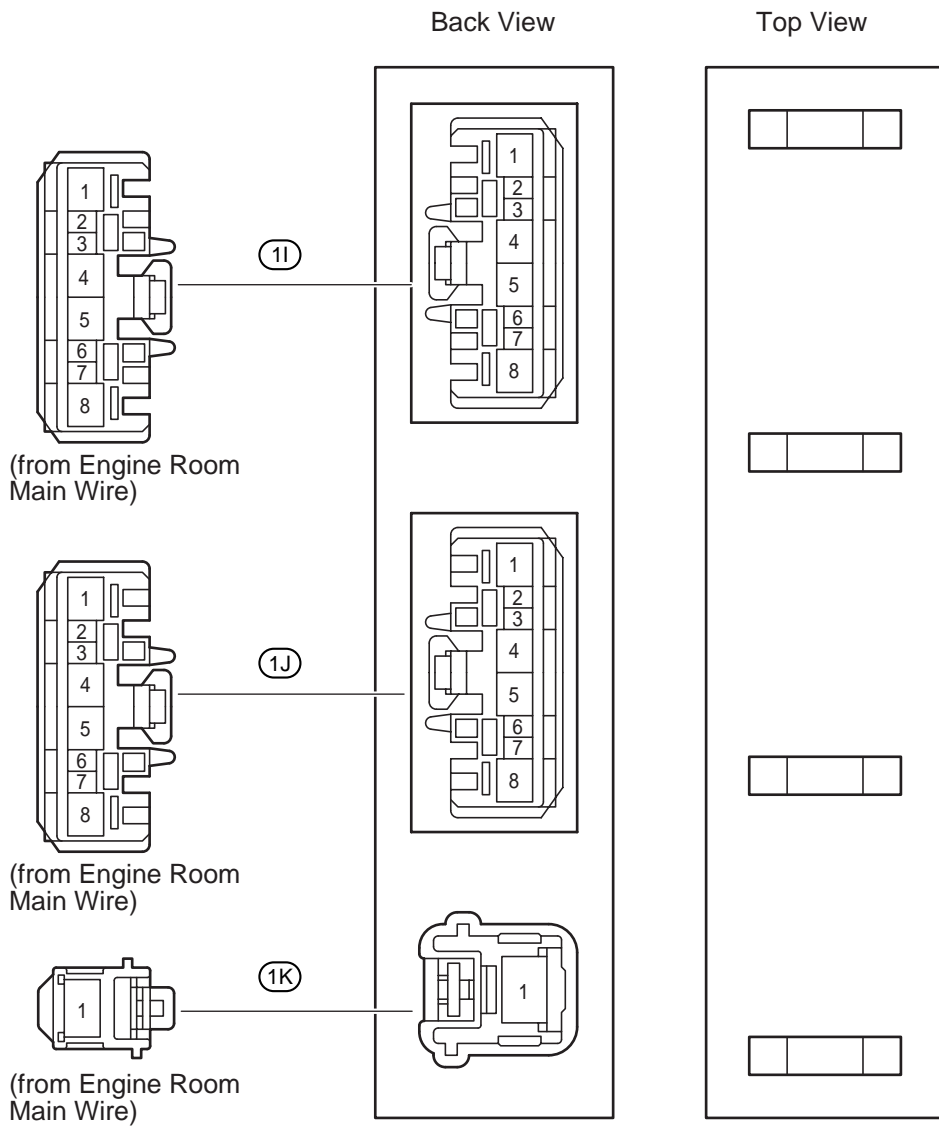


# F RELAY LOCATIONS

[Engine Room R/B No.1 and Engine Room J/B No.1 Inner Circuit]

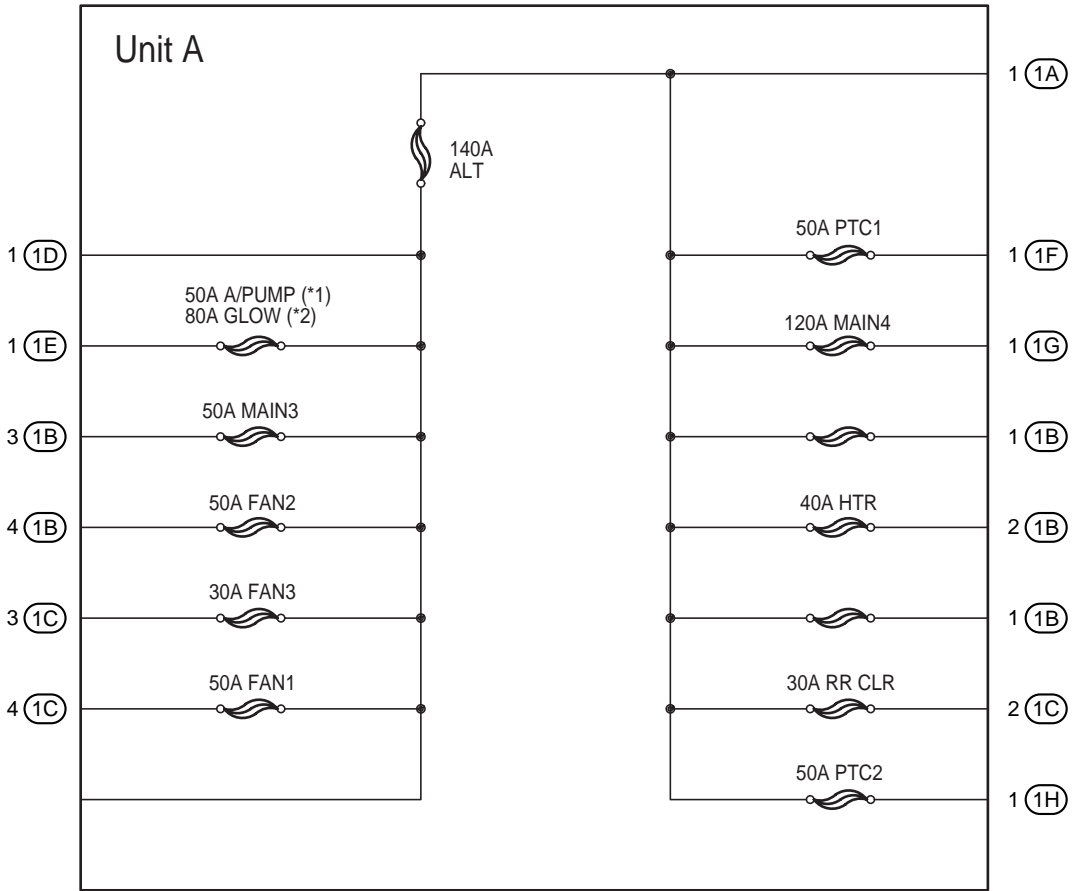


\* 1:2TR-FE  
\* 2:2KD-FTV, 5L-E

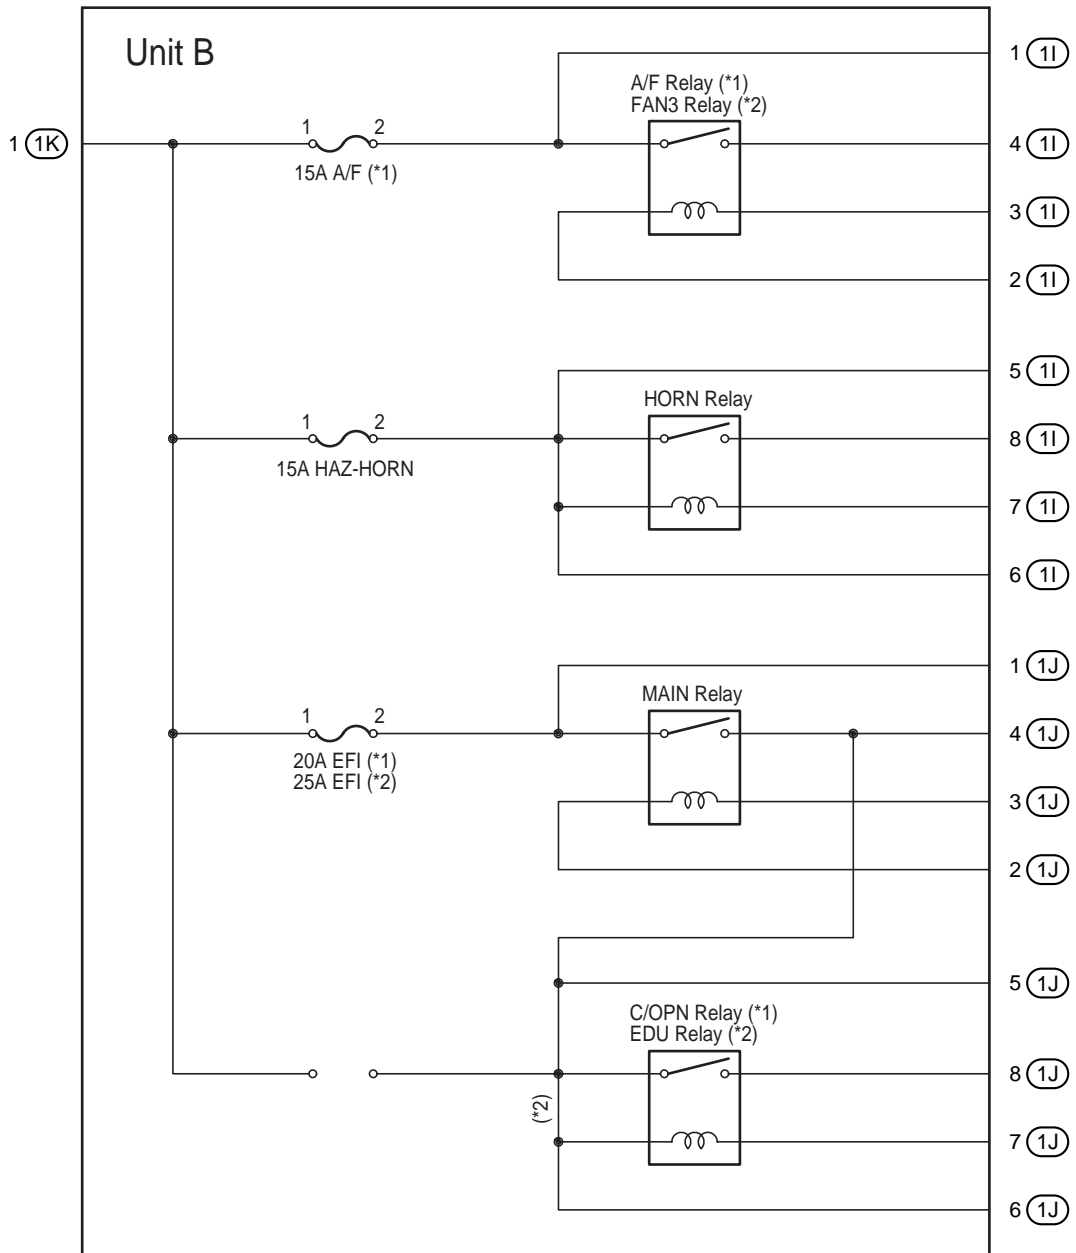


\* 1:2TR-FE  
 \* 2:2KD-FTV, 5L-E

# F RELAY LOCATIONS

② : Engine Room R/B No.2 Inside of Battery Room (See Page 20)

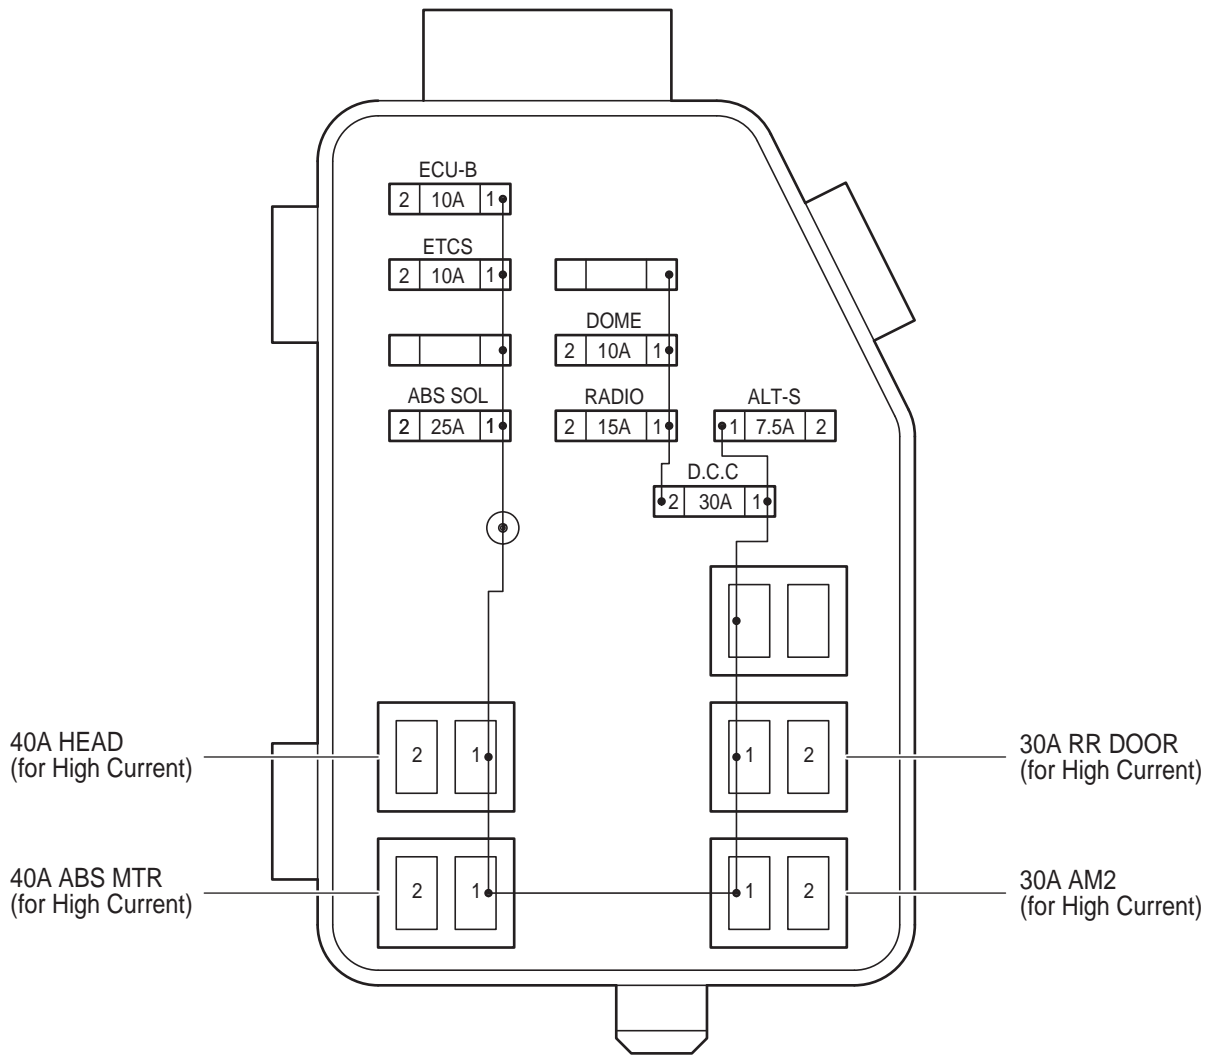



④ : Instrument Panel R/B Under the Glove Box (See Page 21)

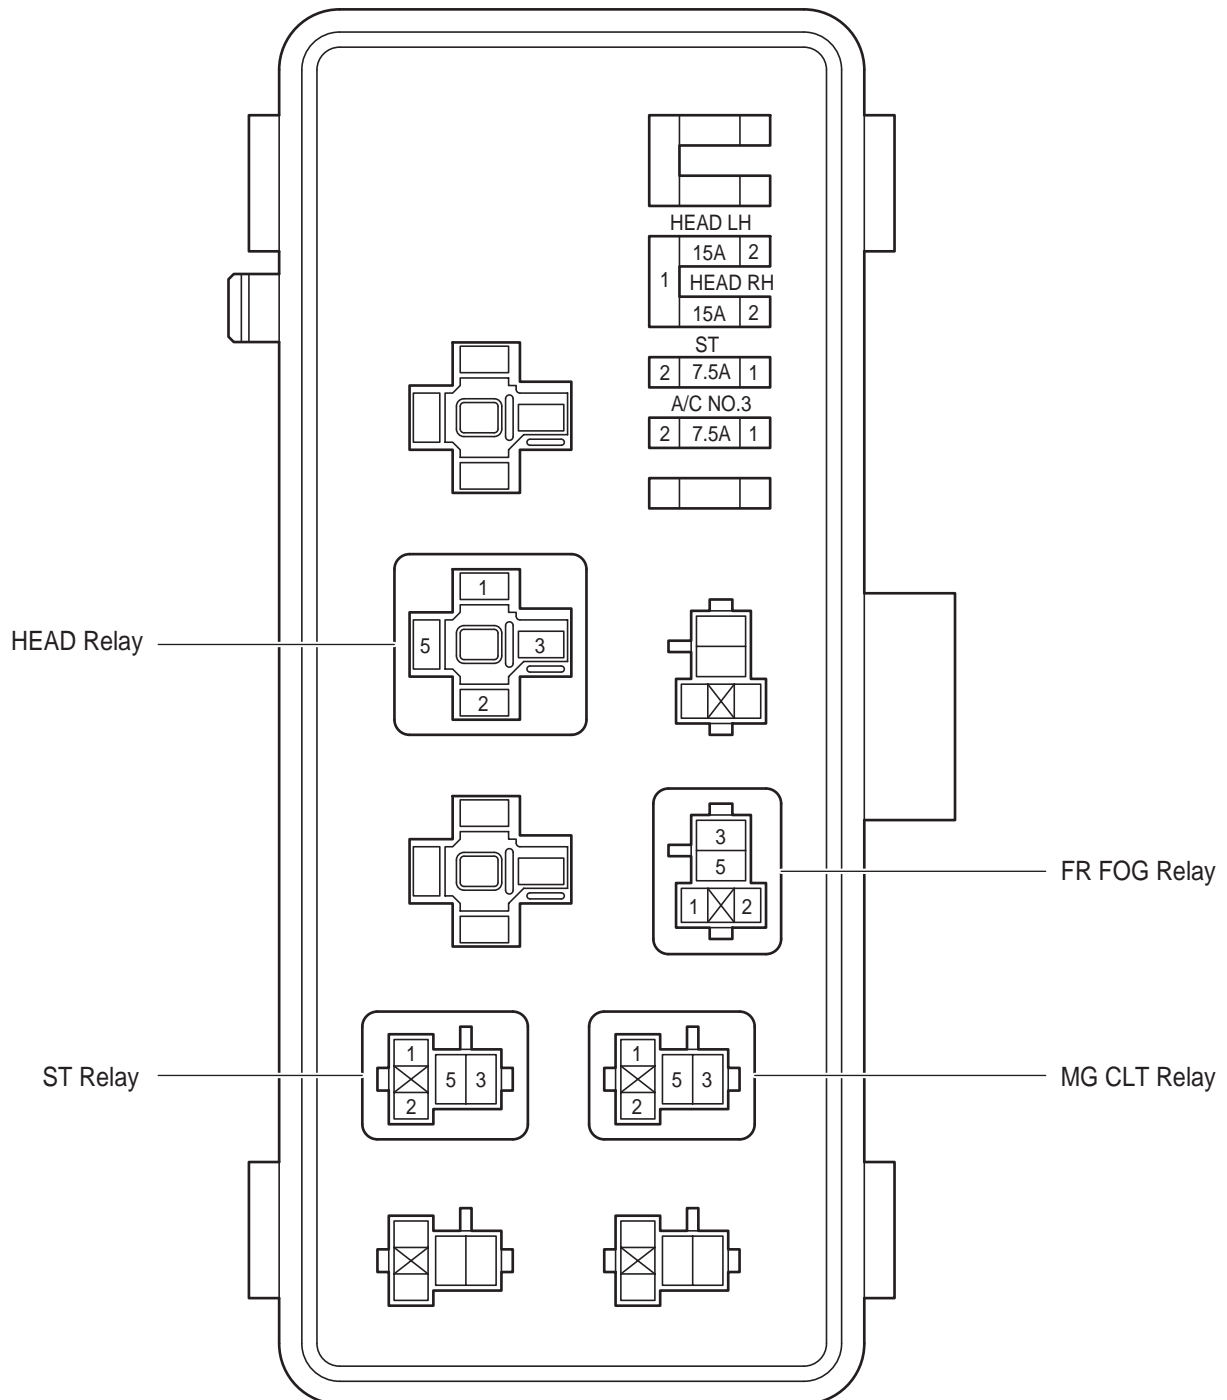

# F RELAY LOCATIONS

 : Instrument Panel J/B    **Left Side of Instrument Panel (See Page 21)**

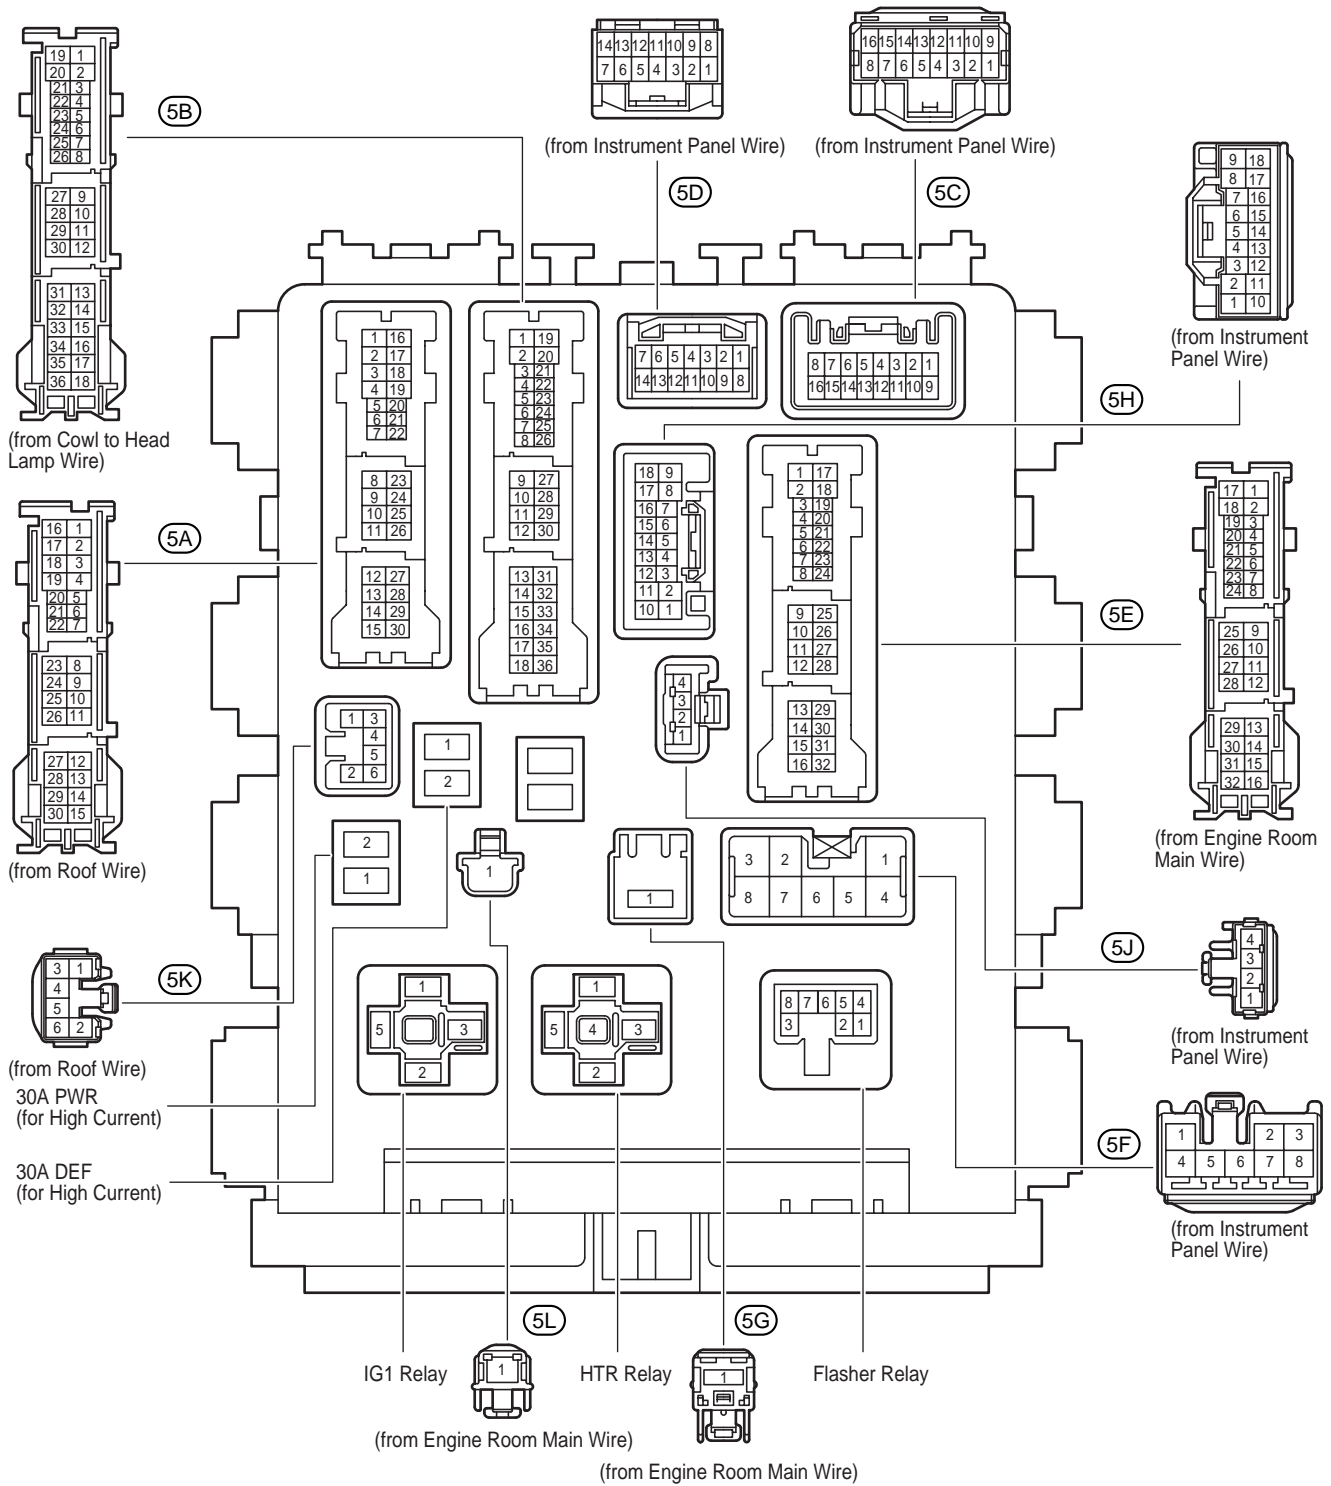


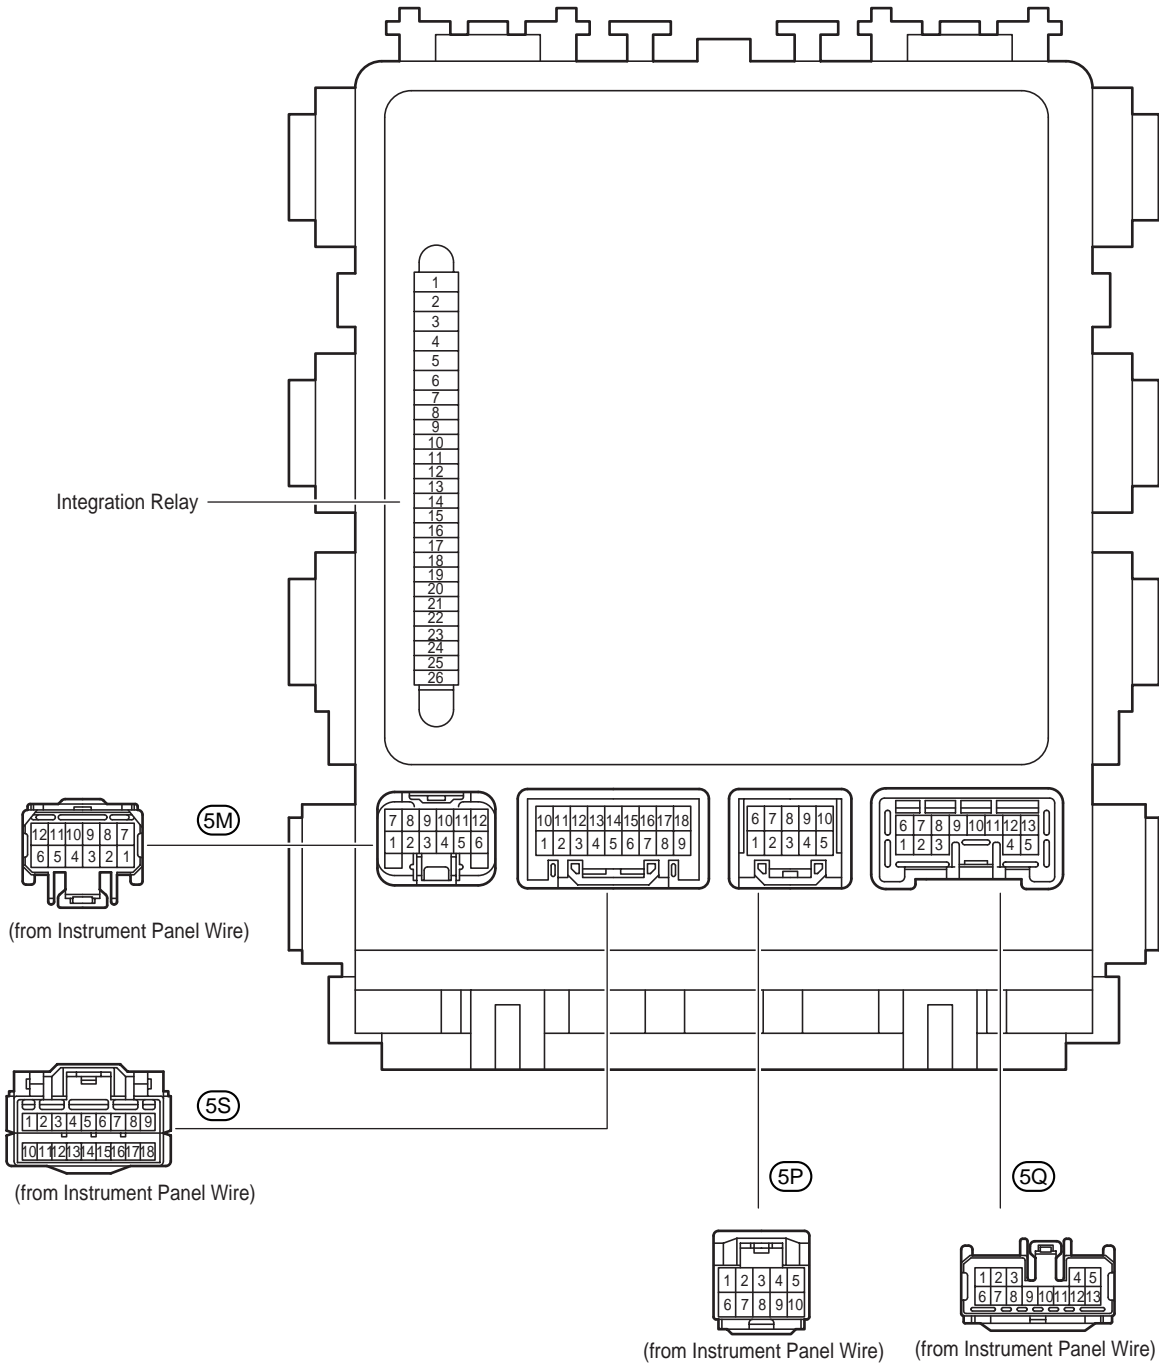

HIACE (EWD622E)

# F RELAY LOCATIONS


○ : Instrument Panel J/B      Left Side of Instrument Panel (See Page 21)

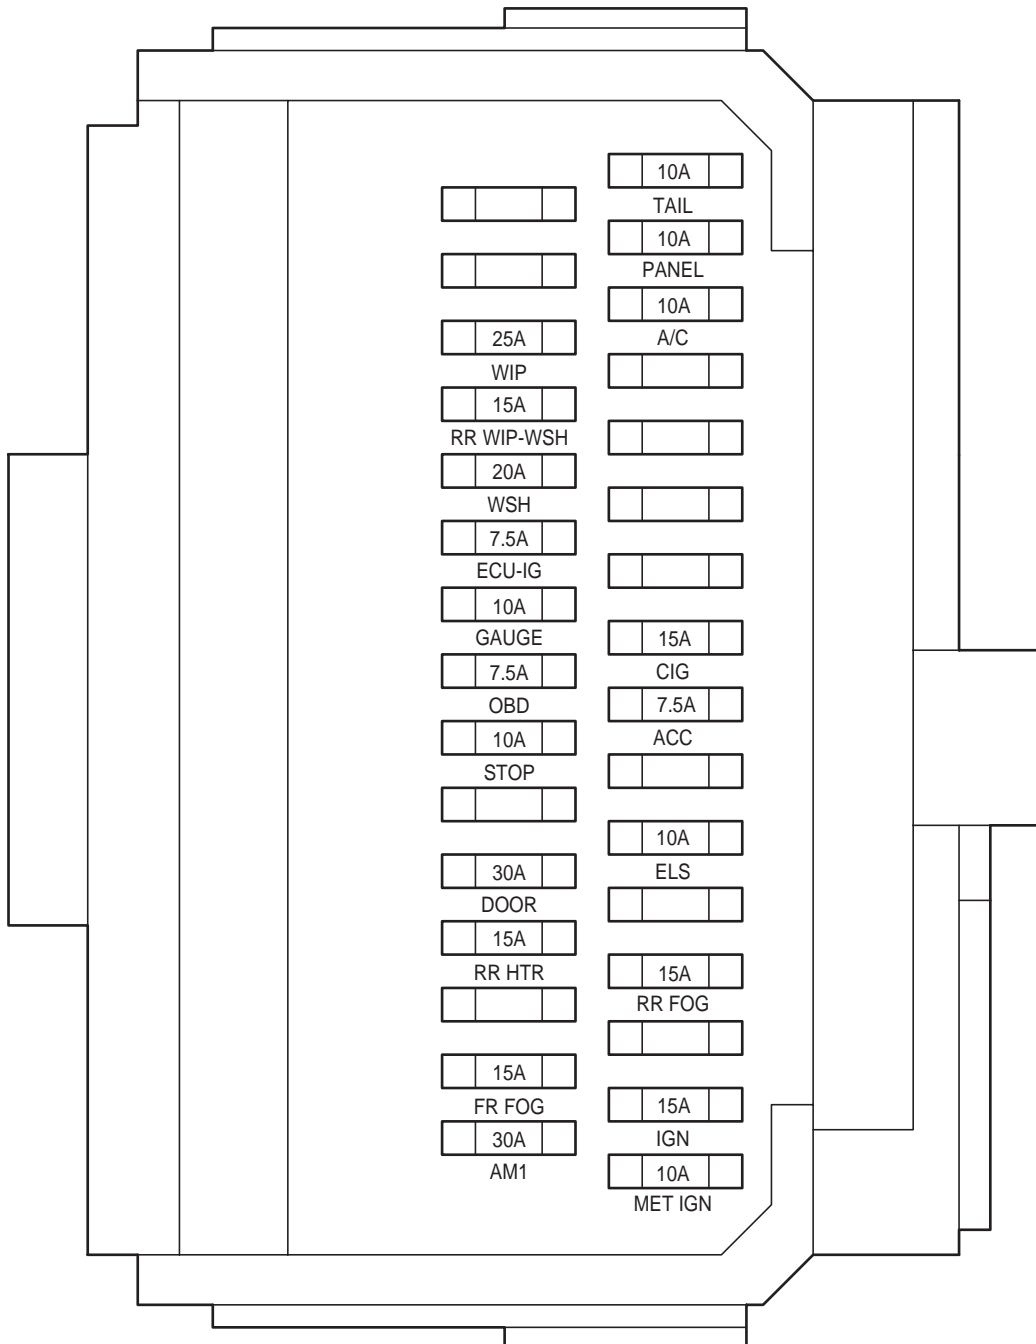




# F RELAY LOCATIONS

## [Instrument Panel J/B Inner Circuit]

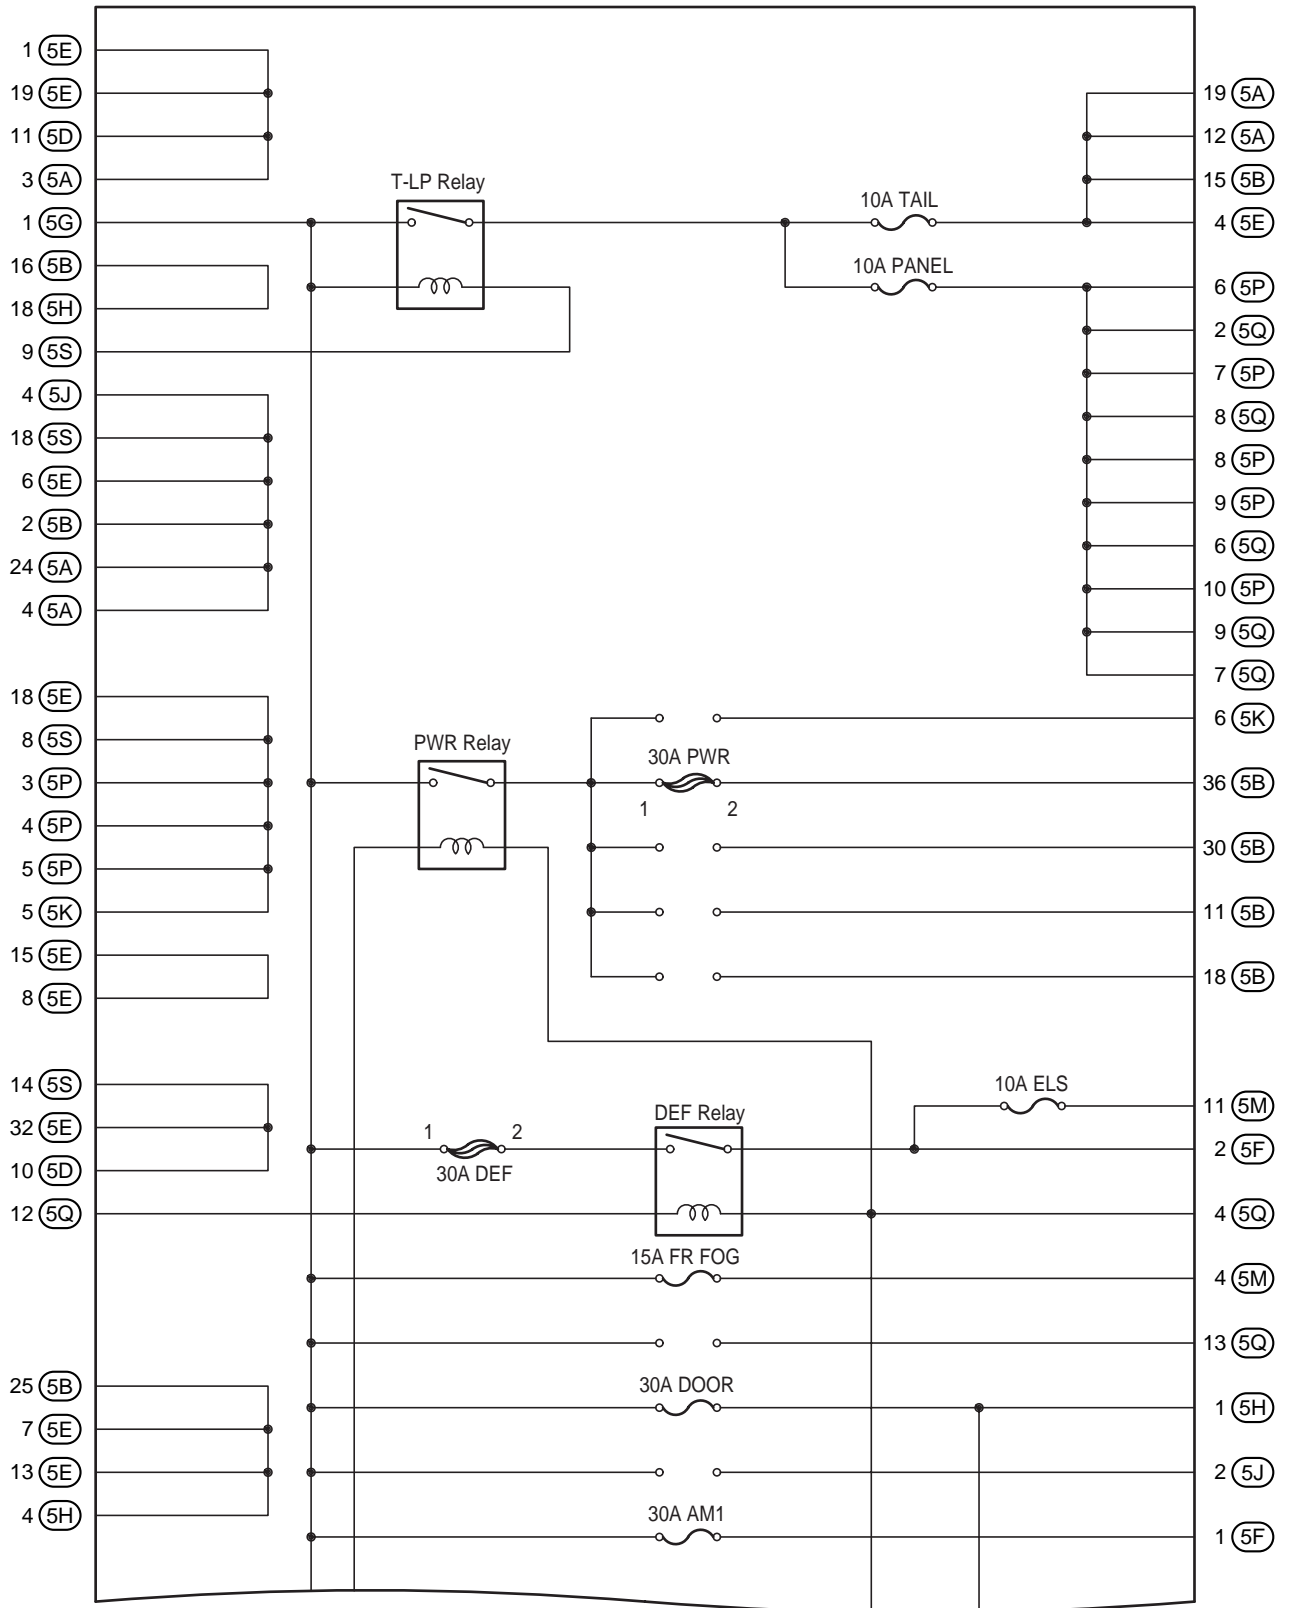

(Cont. Next Page)

(Cont'd)

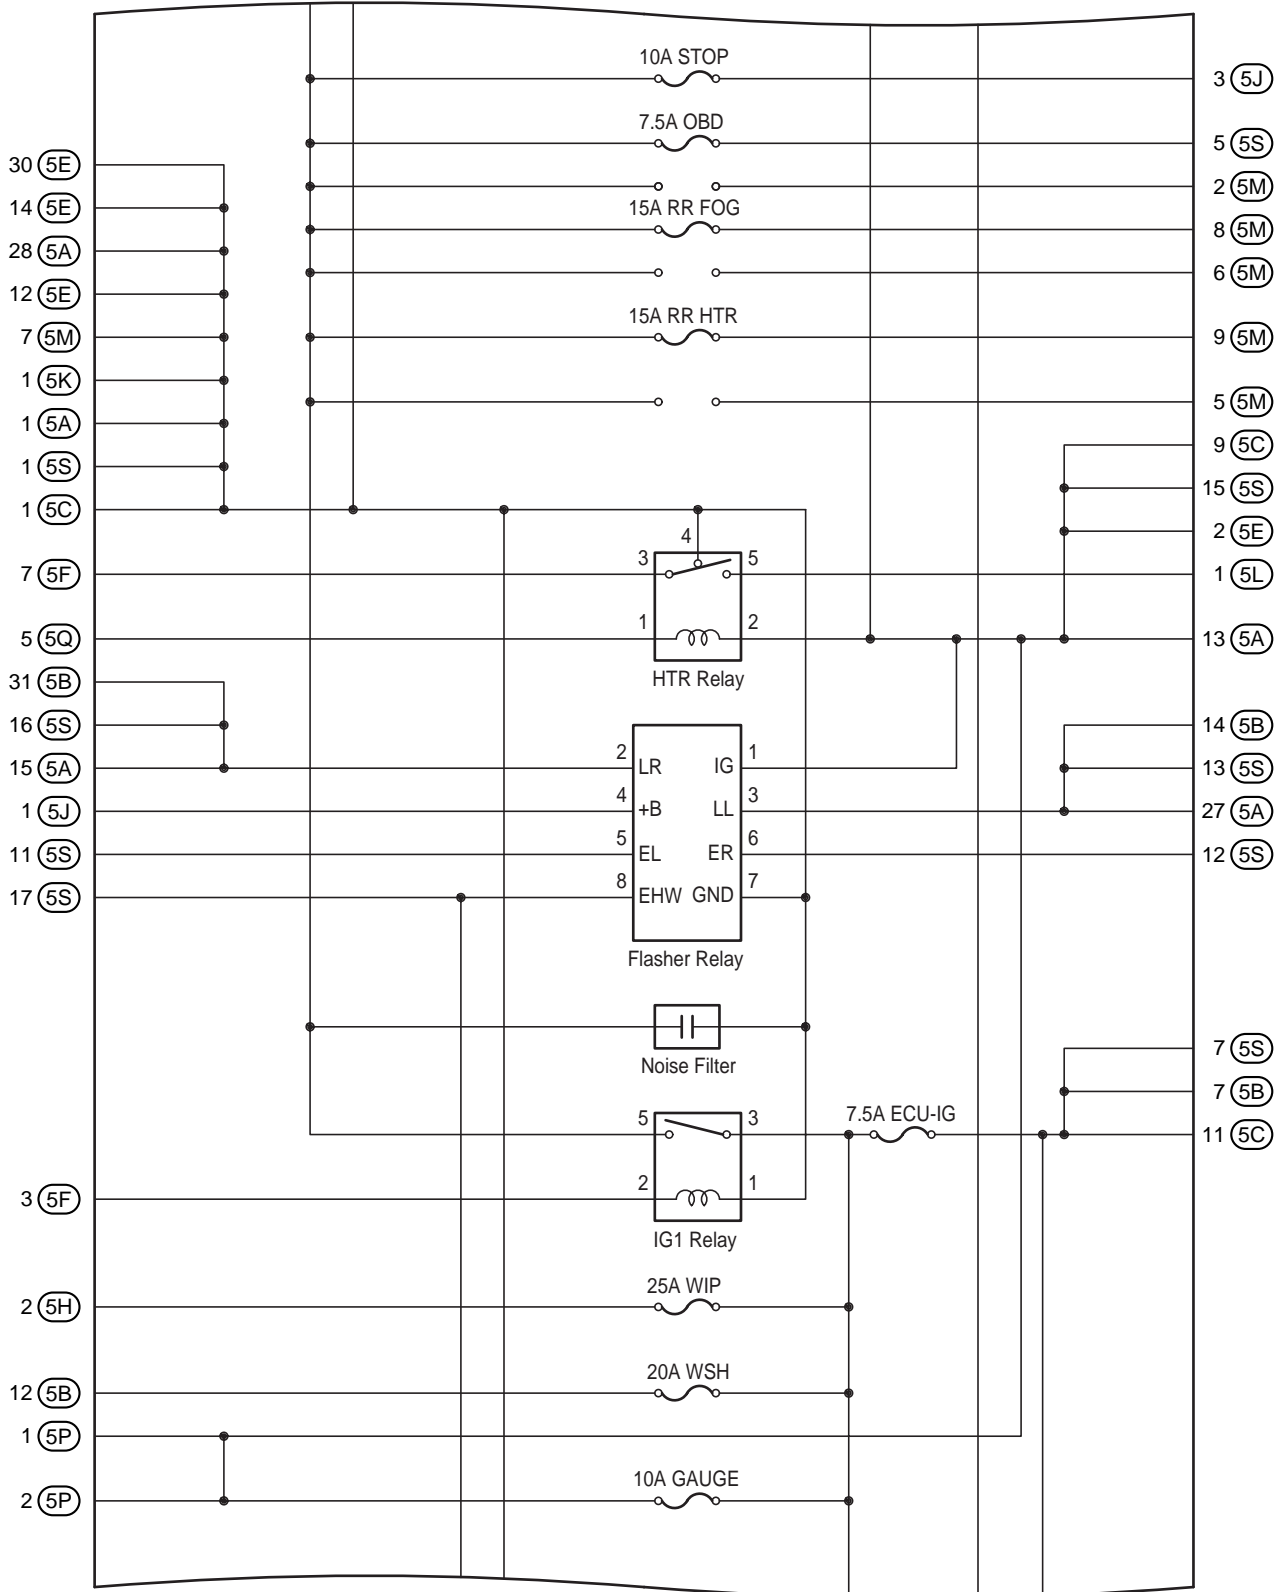


(Cont. Next Page)

# F RELAY LOCATIONS


## [Instrument Panel J/B Inner Circuit]

(Cont'd)

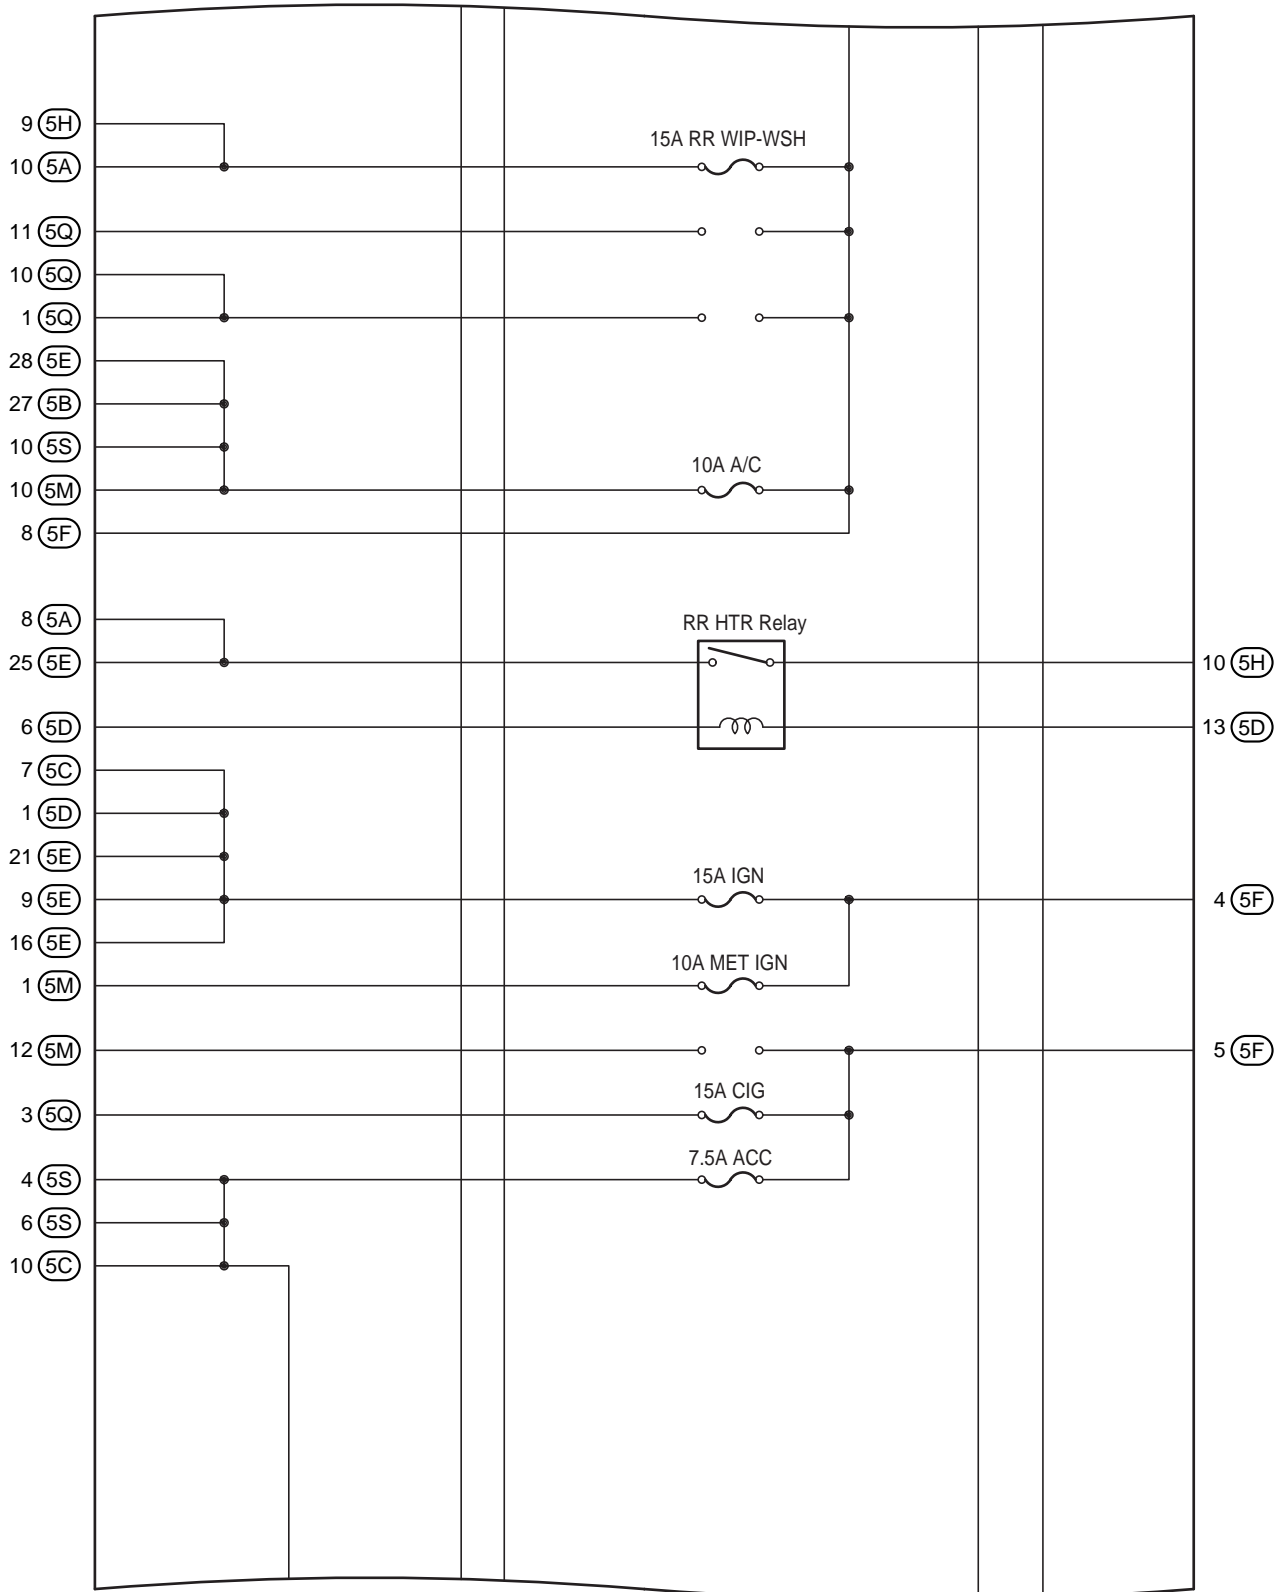


(Cont. Next Page)

(Cont'd)

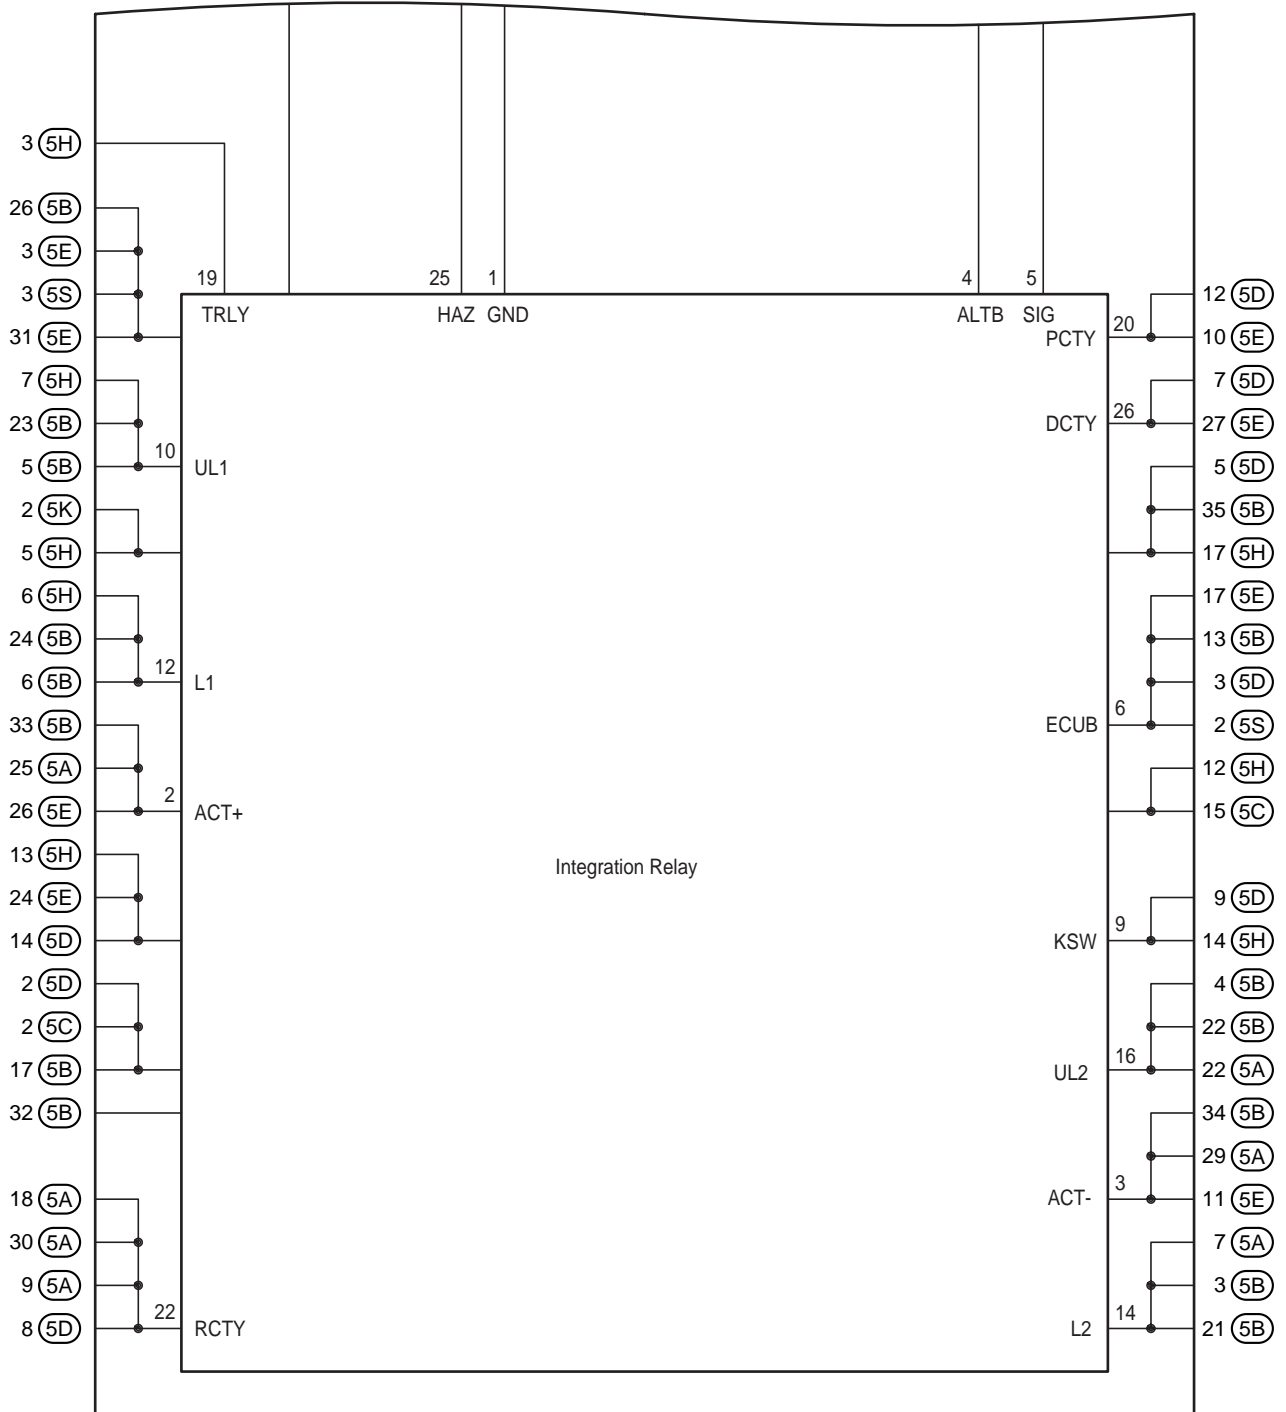

# F RELAY LOCATIONS


 : Center J/B	LHD : Instrument Panel Reinforcement LH (See Page 21)
	RHD : Instrument Panel Reinforcement RH (See Page 21)

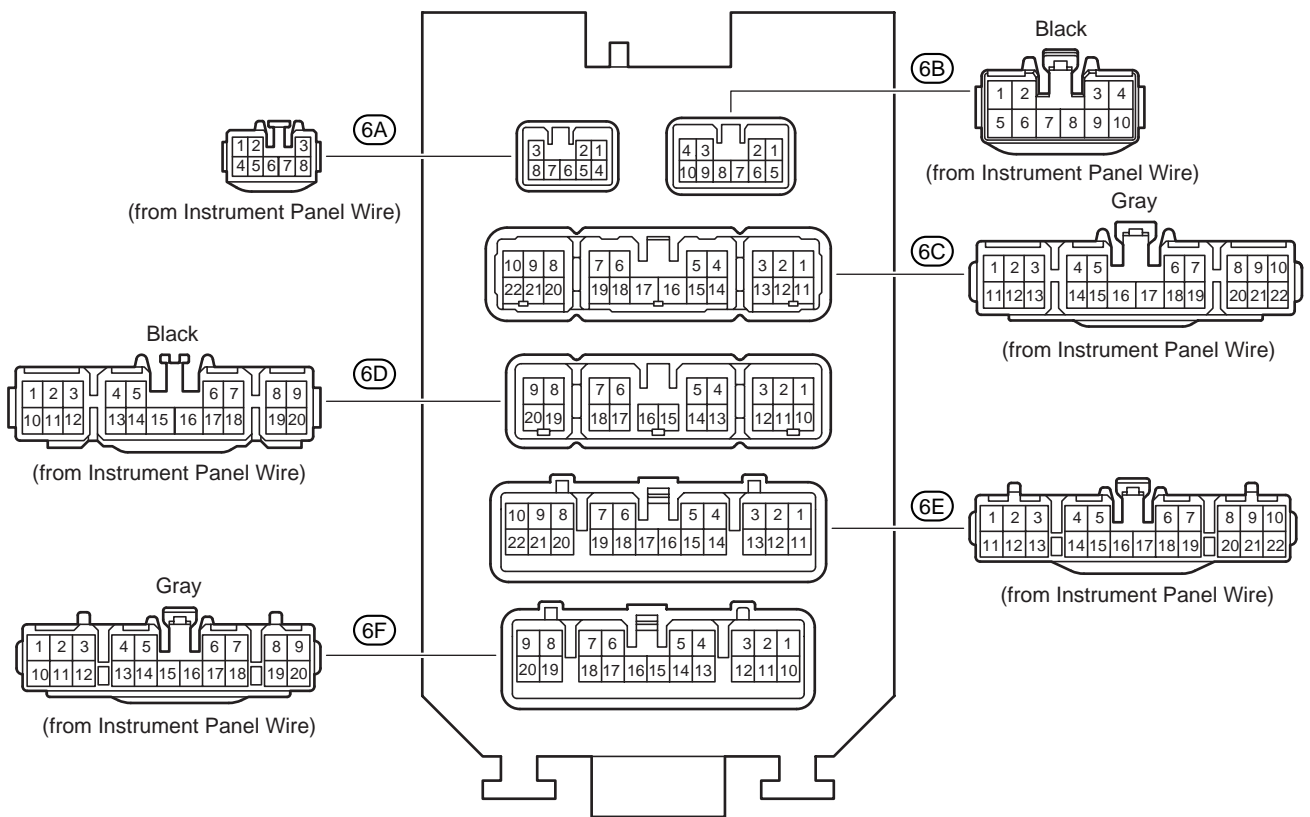




# F RELAY LOCATIONS

[Center J/B Inner Circuit]

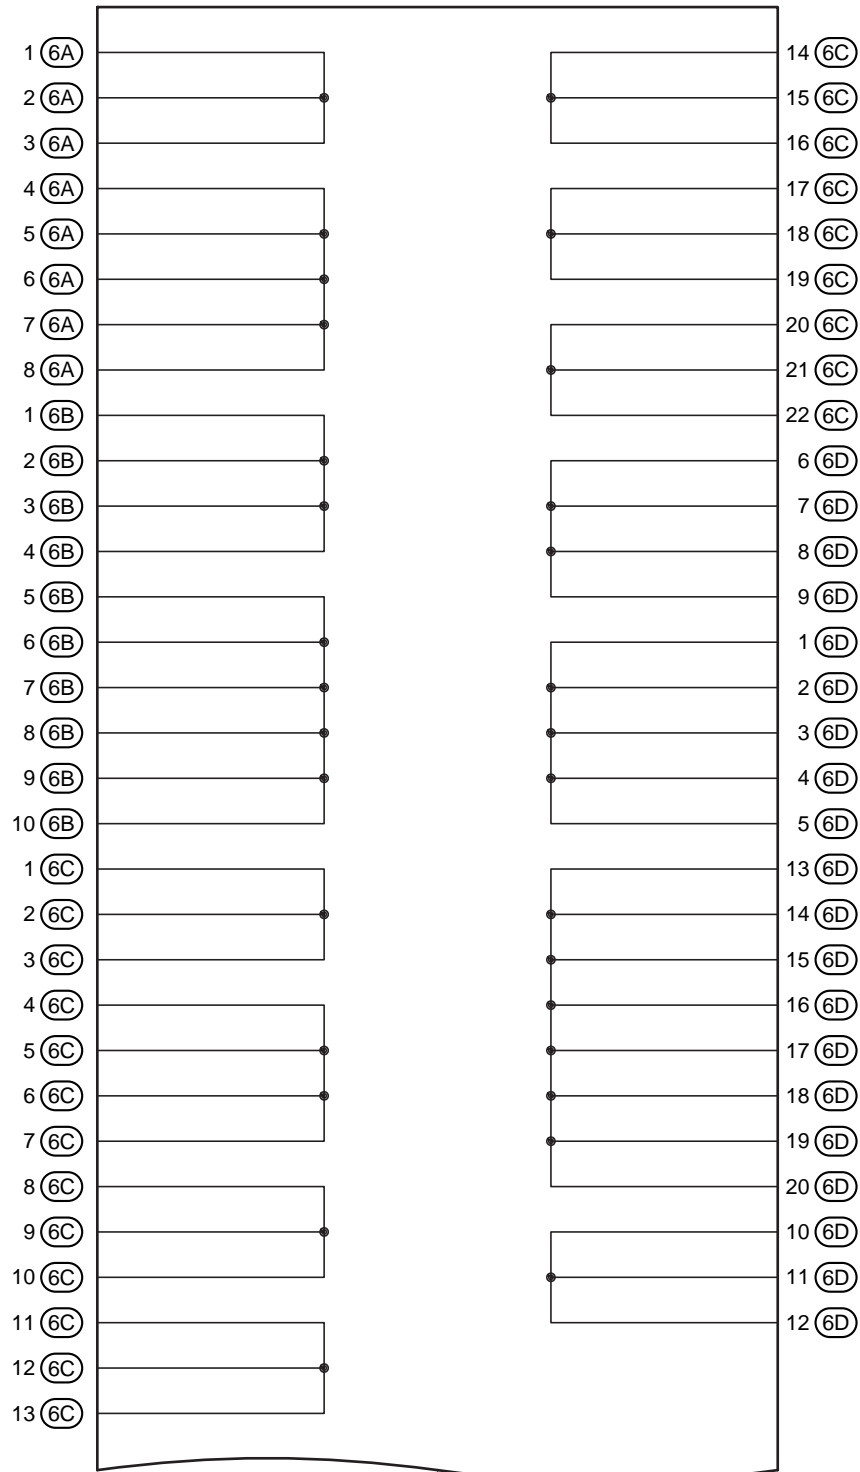

(Cont. Next Page)


(Cont'd)

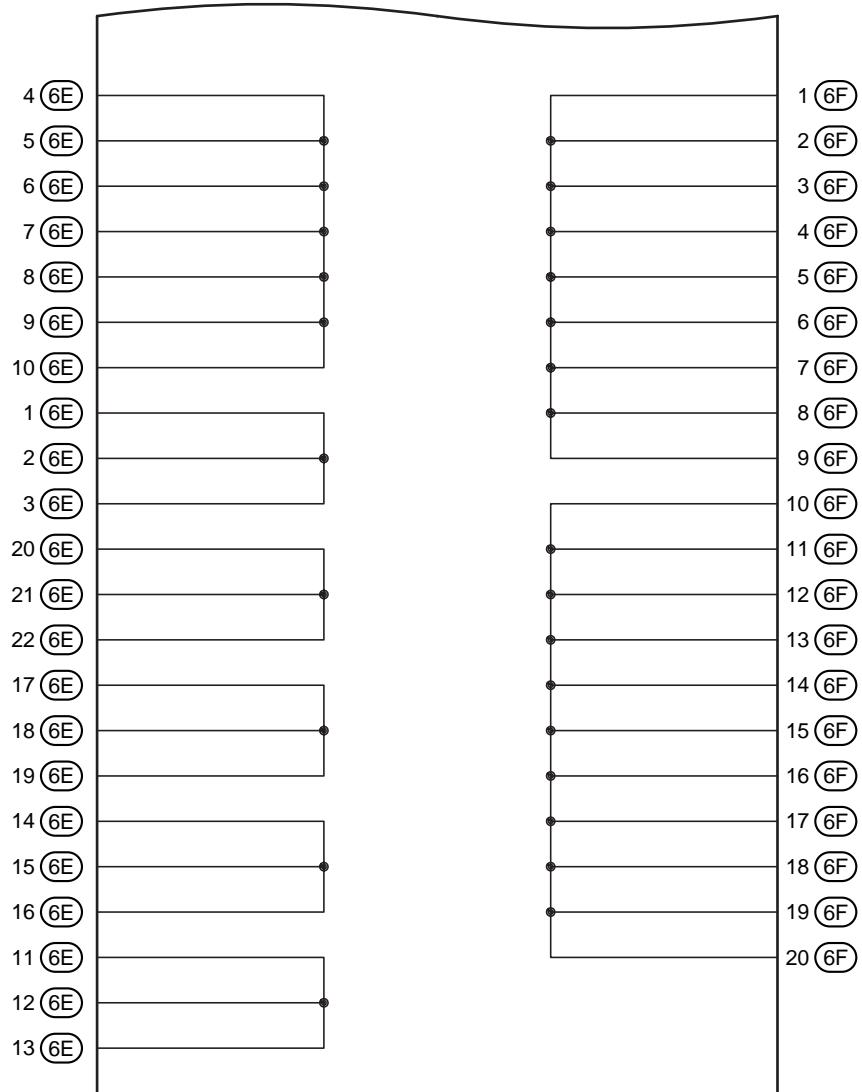

# F RELAY LOCATIONS

Junction Connector

Instrument Panel J/B RH Side (See Page 21)

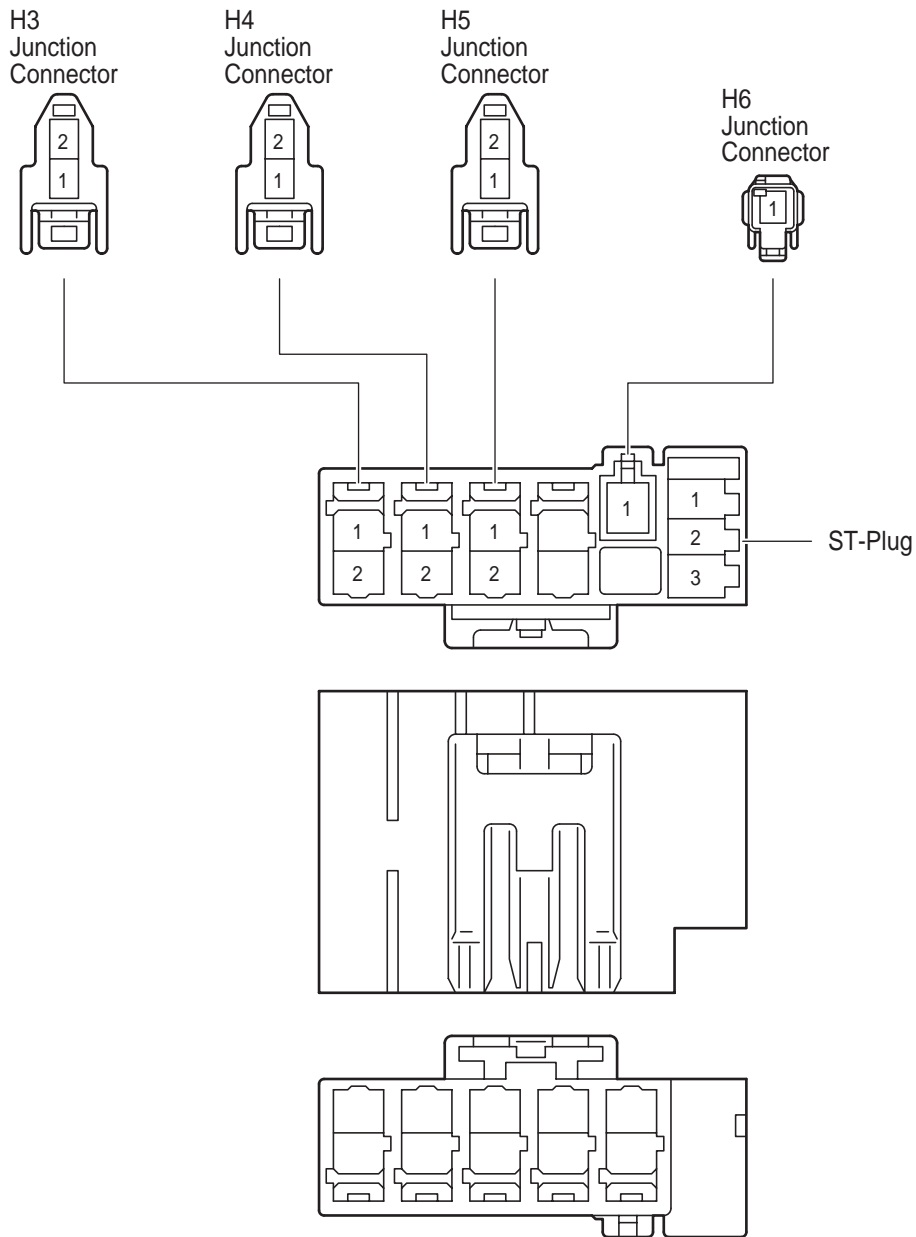

[Junction Connector Inner Circuit]

H3(A), H4(B), H5(C), H6(D)  
Junction Connector

